

E700 WIDE AREA VACUUM



Congratulations on your purchase of a Wide Area Vacuum

This machine has been manufactured in the EC under the most stringent manufacturing and quality standards. These Operating Instructions contain all the necessary information related to the operation and maintenance of the machine. Read these Operating Instructions carefully before you start using the machine or carrying out any maintenance activities. You will find that this machine will more than fulfil your needs. You will get the best results at the lowest cost if you:

- Handle the machine carefully.
- Maintain the machine in accordance with the instructions contained in this booklet.
- Maintain the machine using parts and components supplied or approved by the distributor.

You can order all the required materials at our service centers, distributors or subsidiary companies. Make sure you include the type and the serial number of your machine when you place an order.

Table of Contents

Safety	2
Removing from the cardboard	3
First Check	4
Operation	5
Control panel	6
Placing the dust bag	7-8

Wide Area Vacuum

To reduce risk of fire, electric shock, or injury:

Do not use outdoors or on wet surfaces.

Do not leave vacuum cleaner unattended when plugged in. Turn off the switch and unplug the electrical cord when not in use and before servicing.

Do not allow to be used as a toy. Close attention is necessary when used by or near children.

Use only as described in this manual. Use only manufacturer's recommended attachments.

Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped damaged, left outdoors, or dropped into water, return it to a service center before using.

Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull a cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.

Do not use extension cords or outlets with inadequate current carrying capacity.

Turn off all controls before unplugging.

Do not handle plug or vacuum cleaner with wet hands.

Do not put any objects into openings. Do not use with any opening blocked, keep free of dust, lint, hair, and anything that may reduce airflow.

This vacuum cleaner creates suction. Keep hair, loose clothing, fingers, and all parts of body away from openings.

Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes. Do not use without dust bag in place. Use extra care when cleaning on stairs. Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.

Store your cleaner indoors in a cool, dry area.

Do not unplug by pulling on cord. To unplug, grasp the plug, NOT THE CORD.



GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

 
WARNING - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if will not fit the outlet, have a proper outlet installed by a qualified electrician.

Note: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

Wide Area Vacuum


Removing the machine from the cardboard

- 1 - Open the cardboard
- Take out the tooling and other loose items
- 2 - Tip the box over so that the machine stands on its rear side
- Roll out the machine

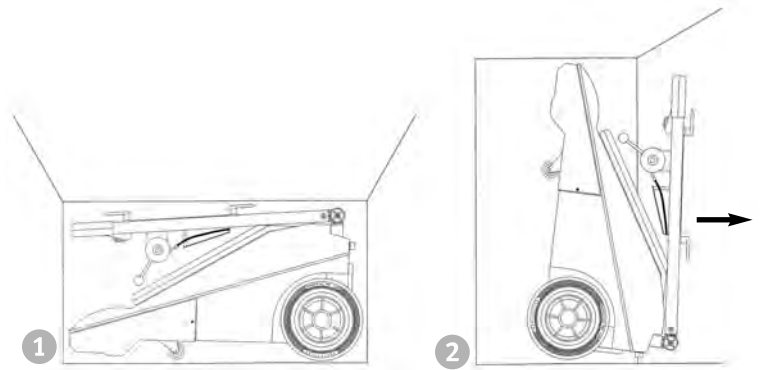

Installation

 - 3 4
- Pull the push handle backwards into operating position.

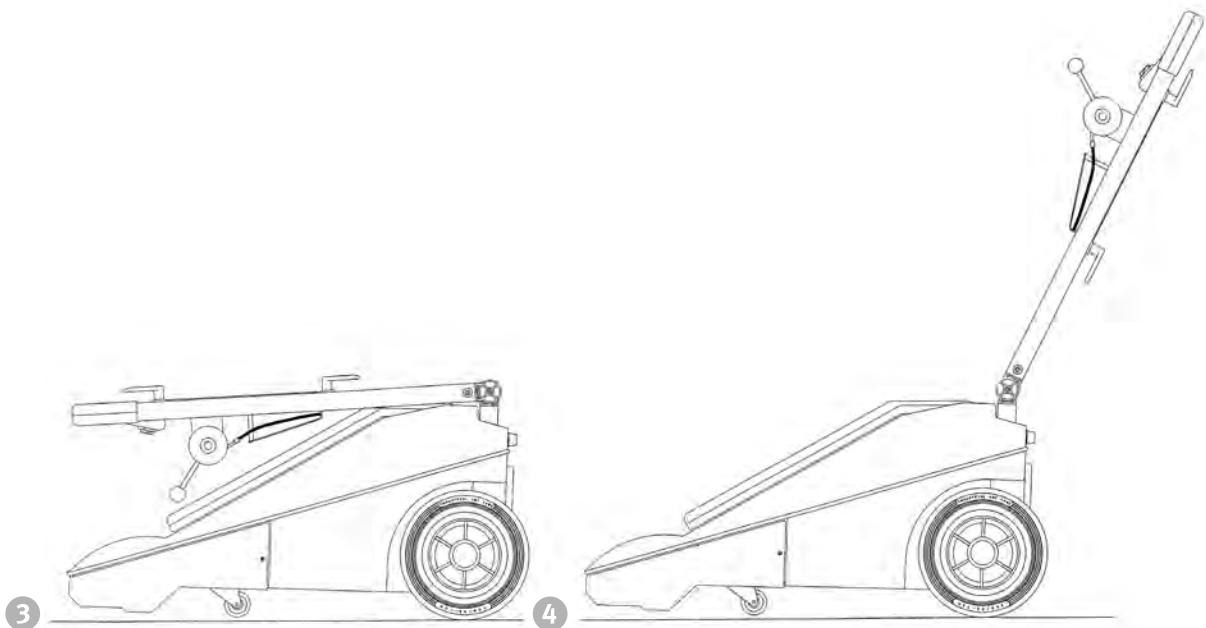

Wide Area Vacuum

Checks and Operation

Check if all the tooling is present and put everything in position as shown.
Check if the dustbag is installed



Wand



Crevice Tool



 
Hose



Bristle



Bent end

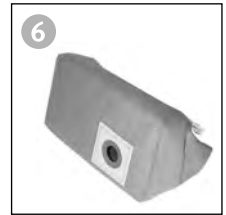

SMS Bag



Floor Tool

 
 
 
Wide Area Vacuum

Operation

When all the tooling of the vacuum cleaner is installed, the connect the power cord to a wall outlet.

On the display the green power supply indicator (1) will light up. If this does not happen, check the power cord or change the main power cord.

By turning on the main switch A, the vacuum motors are activated with a time delay. The brush will operate by pushing handle B. The brush sensor system will indicate the status of the brush pressure on the display. (2)

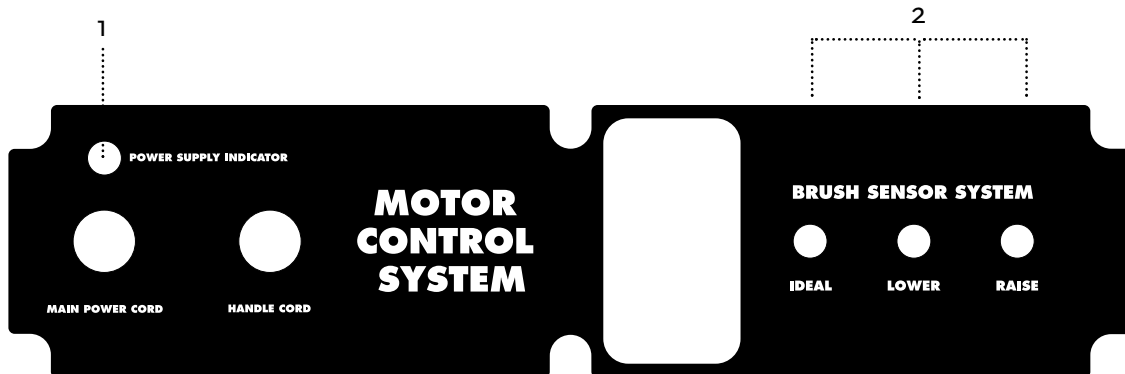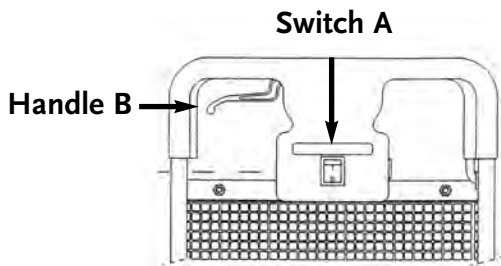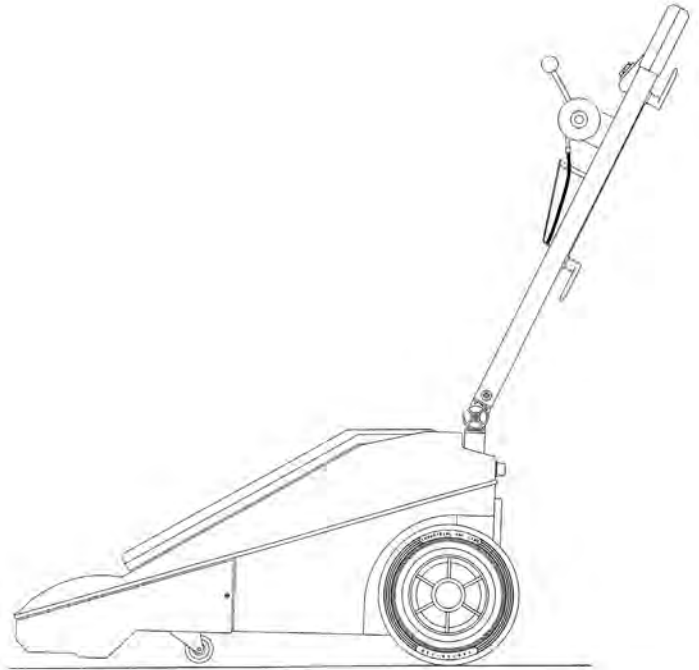

Wide Area Vacuum

Control panel

The machine has a unique motor control system to help you as an operator and to help services and repairs.

The control panel.

1. Power Supply Indicator

2. Infra-red port with a special terminal to read information. Number of hours in operation. Number of times activated. Number of times overheated because of blockages. Reset or reprogram the zones green, yellow and red.


The three indicators on the panel

- | | |
|-----------|--|
| 3. Green | Brush pressure okay
Height is ok |
| 4. Yellow | Brush pressure too low
Adjust the height |
| 5. Red | brush pressure too high
Adjust the height |

Height Adjustment

- | | |
|--------------|---------------------|
| Green-Light | Optimal performance |
| Yellow-Light | Push handle down |
| Red-Light | Pull handle up |

 When the brush roll is blocked the red light starts blinking. Loosen the handle to stop the blinking.

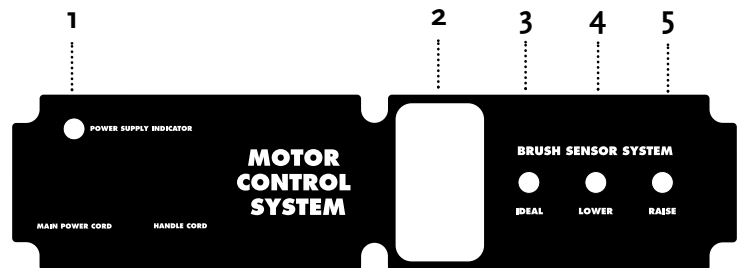

Let's make things easy for you and us.

 
Wide Area Vacuum

OPTION

Placing the dust bag into the SMS bag



Unplug the machine from the wall outlet before changing the dustbag.

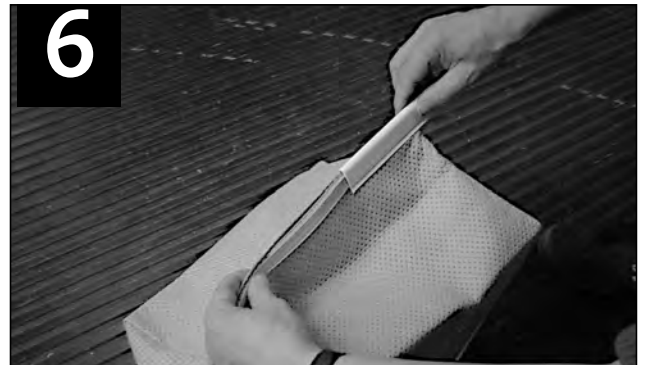

Wide Area Vacuum

Placing the dust bag

