

Operating manual
high-pressure cleaner

kranzle[®]

1122TST

www.kraenzle.com

CE




Read and conform safety instructions before use!
Keep instructions in a safe place for later use and
pass them on to any future user.

- GB -



2 Description of high-pressure cleaner


Kränzle 1122 TS T

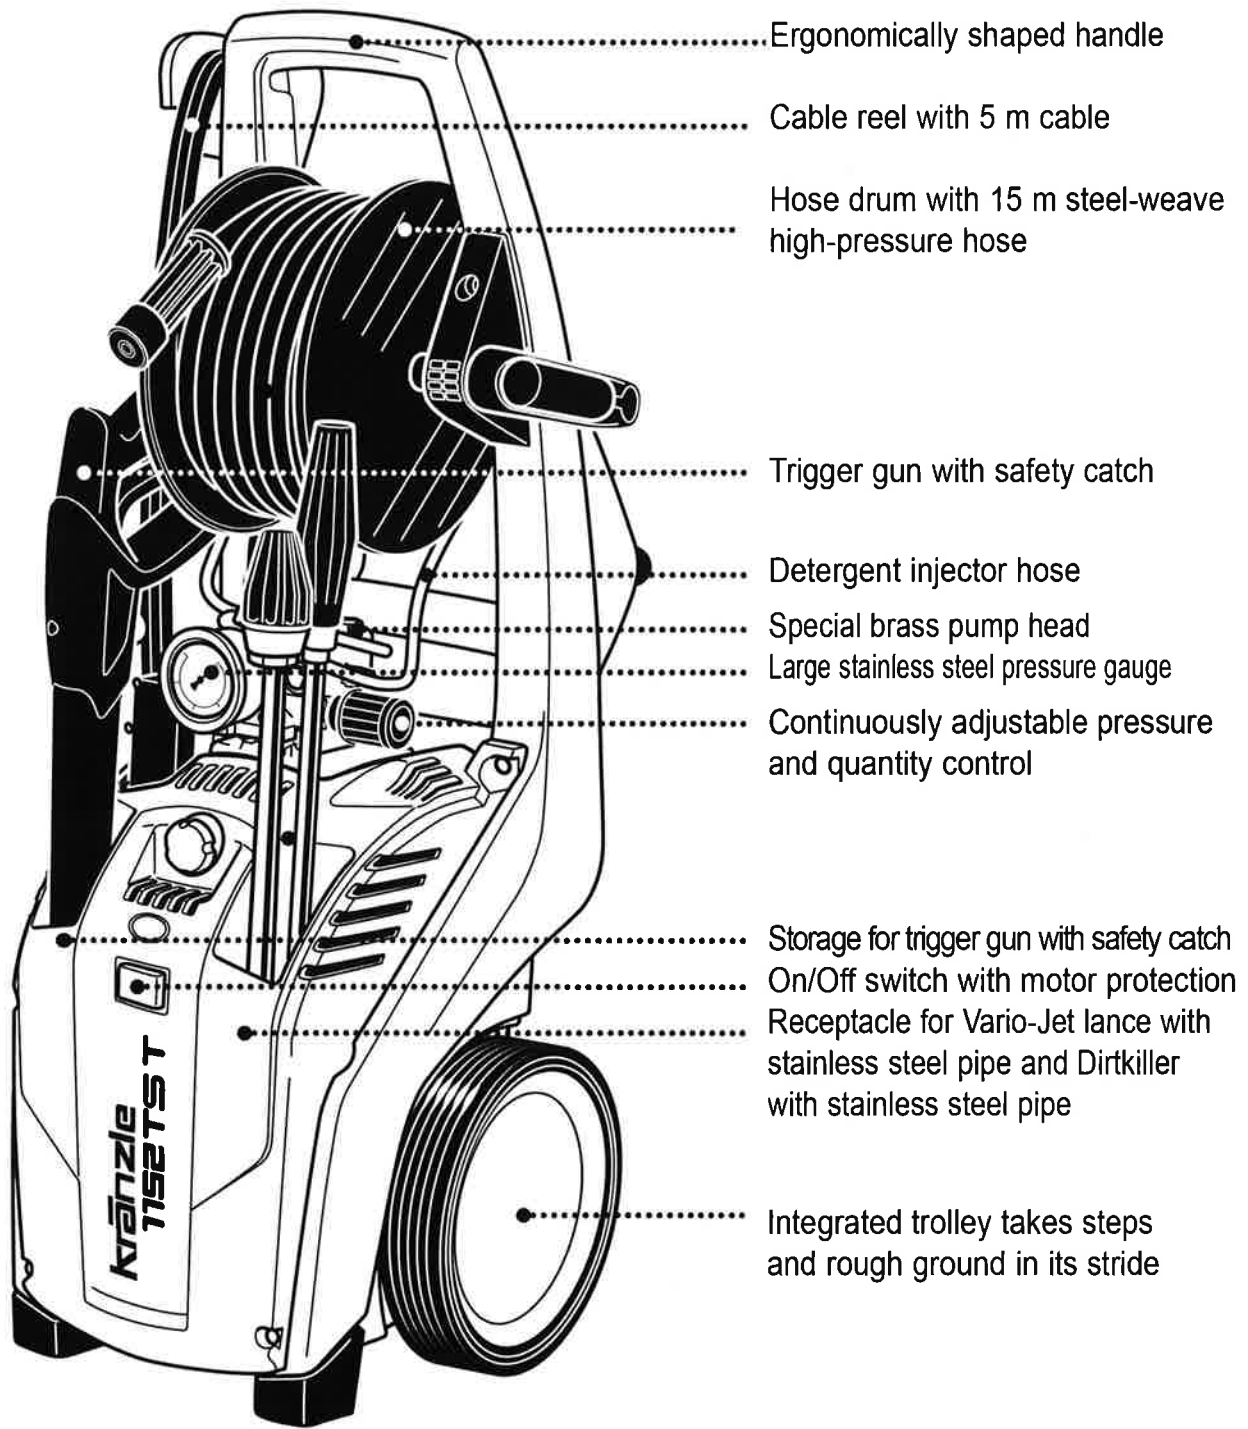

Contents

Description	2
Contents	3
Technical data	4
Overview "This is what you have purchased"	5
General rules - accident prevention	6
Safety precautions - accident prevention	7
Please note - important	10
Kränzle- technology	12
Putting into operation	14
Suction of detergents	18
To shut down the pump	19
Small repairs – do it yourself!	20
EC declaration of conformity	24
Guarantee	25
Versatile due to Kränzle accessories	26
Inspections – inspection reports	44


4 Technical data

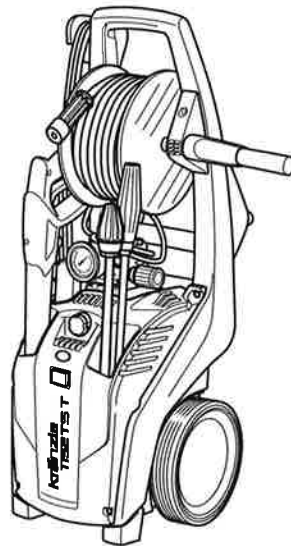


Kränzle 1122 TS T

Operating press. continuously adj.	30-95 bar / 3 - 9,5 MPa / 1400 psi
Nozzle size	042
Permissible overpressure	120 bar / 12 MPa / 1600 psi
Water output	bei 1.700 U/min 8.3 l/min / 2.1 Gpm
Water inlet pressure	10 bar / 1,0 MPa / 145 psi
Water inlet temperature	max. 60 °C / 140 °F
Hose drum	yes
Steel-weave high-pressure hose	15 m, NW 6
Detergent suction	yes
Total stop system	yes
Connected load	110-127 V~, 14,0 A, 60 Hz
Power input	P 1 - 1.65 kW
Power output	P 2 - 1.35 kW
Weight	31,5 kg
Dim. incl. pulling handle in mm	360 x 365 x 870
Sound level acc. to DIN 45 635	88 dB (A)
Sound level with Dirtkiller	90 dB (A)
Acoustic power L_{WA}	93 dB (A)
Recoil at lance	ca. 27 N
Vibration at lance	1,9 m/s ²

This is what you have purchased

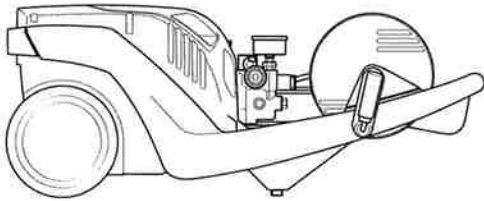5

1. Kränzle high-pressure cleaner
1122 TS T with 15 m steel-weave high-pressure hose and hose drum

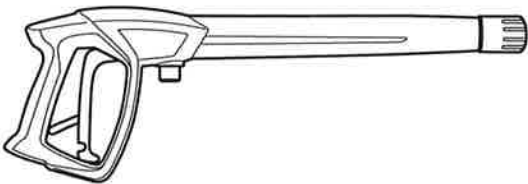


2. Trigger gun with insulated handle and screw connection




3. Dirtkiller lance with stainless steel pipe




4. Vario-Jet lance with stainless steel pipe

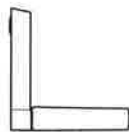

5. Handle with fixing screw for hose drum



6. Attachment hook for cable with 2 fixing screws

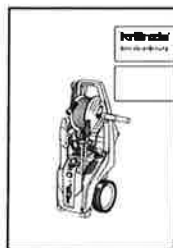

7. Operating manual

General rules

■ Range of application

Use machines for cleaning tasks with high-pressure water jet and detergents or with high-pressure water jet without detergents only.

■ Inspections

The machine must be inspected according to the "Guidelines for Liquid Spray Devices" at least once every 12 months by a qualified person, to ensure that continued safe operation is guaranteed. The results of the inspection are to be recorded in writing. This may be done in any form. For inspection reports see pages 44 - 45.



High-pressure cleaners used for commercial purposes have to be checked by a qualified person at least every 12 months!

■ Accident prevention

The machine is designed for accidents to be impossible if used correctly. The operator is to be notified of the risk of injury from hot machine parts and the high pressure water jet. The "Guidelines for Liquid Spray Devices" must be complied with (see pages 36-38).

■ Oil change:

The first oil change should be carried out after approximately **50 operating hours**. After that no further oil change will be necessary to perform an oil change for the life cycle of the high-pressure cleaner. If it becomes necessary during repairs, or because the oil has a greyish colour then the oil draining screw should be opened and the oil emptied into a container. The oil is to be caught in the reservoir and disposed of in an approved manner. **New oil: 0.25 l - Motor oil: W 15/40.**



Oil leakage: If oil leaks contact your nearest after-sales service (dealer) at once. (Environmental damage, damage to the transmission)




In case of increased humidity or fluctuations in temperature development of condensed water is possible; if the oil turns grey, it must be changed.


Safety precautions



Bear in mind that during cleaning tasks with a high-pressure water jet a significant recoil at the lance arises. Please stand firmly.

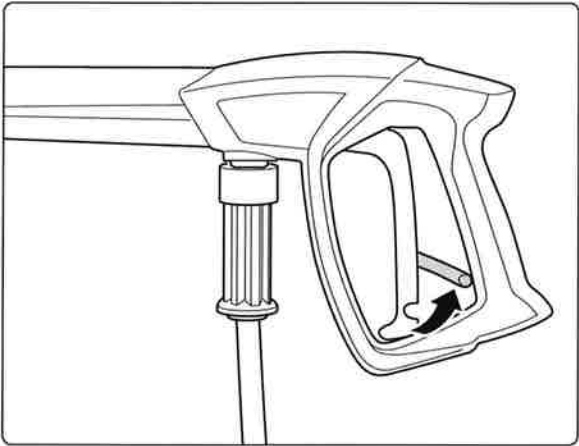


Apply safety catch on the trigger gun after each use, in order to prevent unintentional spraying!

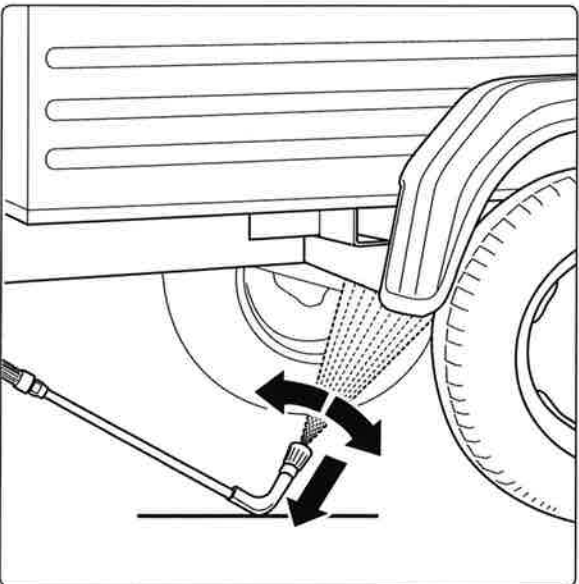


Always aim the underbody lance! Bear in mind when using a curved or angled spraying lance that there is a significant amount of torque in the recoil (the underbody lance is available as optional accessory)

Safety precautions – This is prohibited!

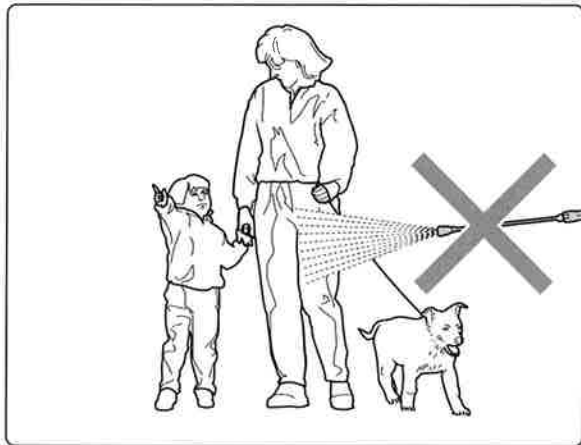


Never direct the water jet at people or animals!

Never direct the high-pressure jet at yourself or other persons, not even to clean clothing or shoes.

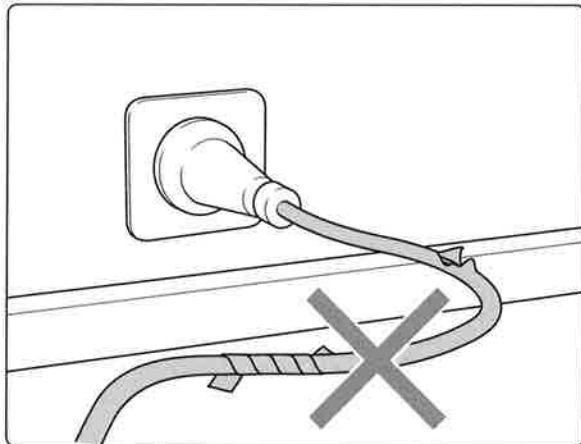


Only use power cables which are in perfect working order!

Do not damage the power cable or repair it incorrectly!

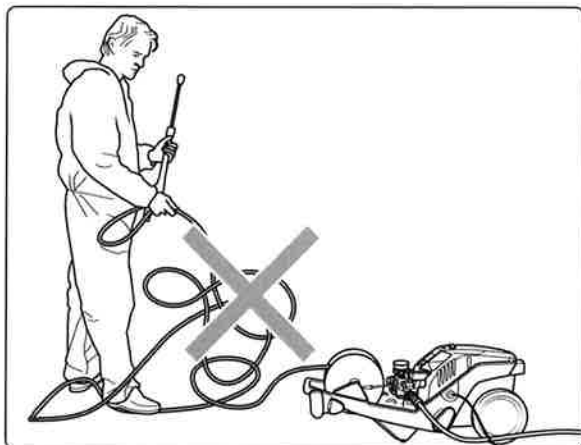


Never pull the high pressure hose if it has formed kinks or “nooses”!

Never pull the hose over sharp edges!

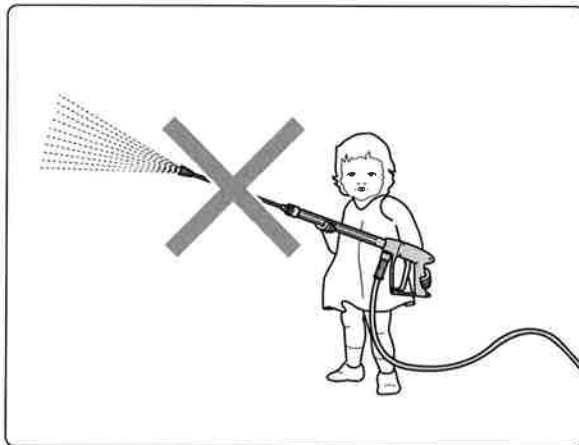


Never allow children or untrained persons to use the high pressure cleaner!

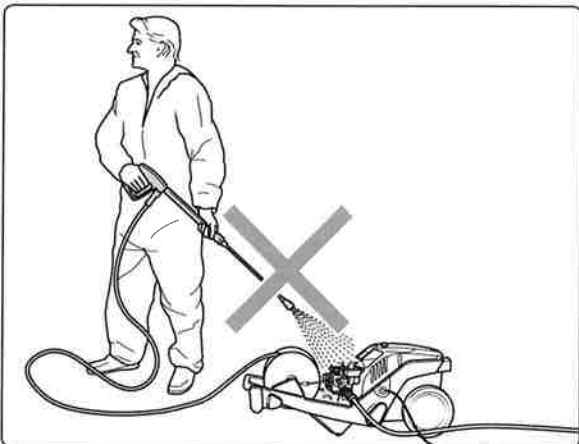


Never direct the water jet at the machine itself!

The machine may not be placed within reach of the water jet spray mist!

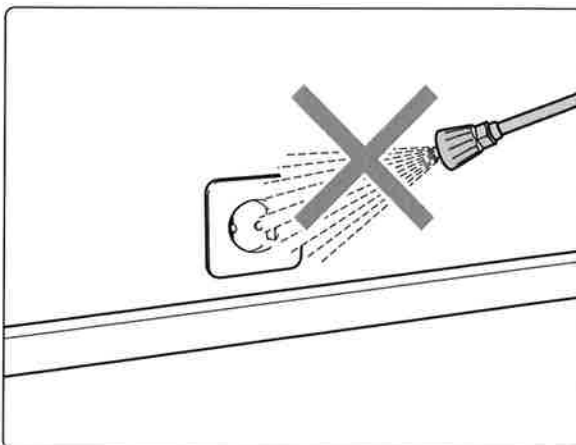

Never direct the water jet at power sockets or any other electrical installations!

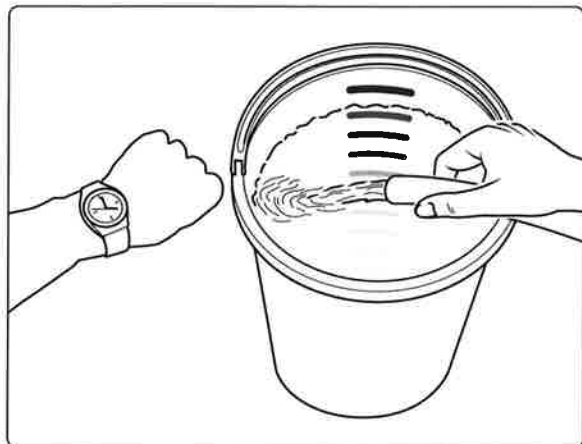10 Please note - important:**■ Lack of water**

Lack of water occurs more often than you probably believe. The more powerful a high-cleaner is the greater is the danger that a lack of water occurs. If there is only an insufficient amount of water available, cavitation (water-gas mixture) arises inside the pump, which is normally noticed too late or even not at all. **The pump will be destroyed!**

Please check the available quantity of water by filling a bucket with litre scale for one minute.

A minimum water quantity of 8.3 litres per minute (2.1 Gpm) must be available to guarantee a trouble-free operation of the Kränzle 1122 TS T.



If the metered quantity of water is too small, you have to use a different water connection, guaranteeing the necessary output.



Lack of water leads to an accelerated wear of the joints (guarantee void).


■ Water supply

Please pay attention to the regulations of your waterworks company! In accordance with DIN EN 61770, the machine may not be directly connected to the public drinking water supply lines. A brief connection however is permissible according to DVGW (German Association for Gas and Water Affairs) if a non-return valve with tube ventilator (Kränzle order no. 41.016 4) is built into the water supply. **Once the water has passed through the non-return valve it is no longer considered as drinking water.**

Also indirect connection to the public drinking water supply lines is permissible by way of free emission in accordance with EN 61 770; e.g. by using a reservoir with a float valve.

Direct connection to a non-drinking water supply line is permissible.

■ Insufficient quantity of electricity

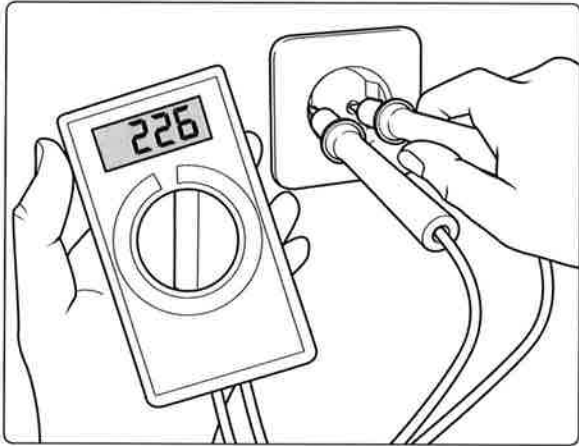

If there are too many collectors in your proximity connected to the network at the same time, the available voltage and the current intensity may decline.

Consequently the motor of the high-pressure cleaner does not start or even blows.

The power supply may also be insufficient if the power cable is too long or too thin.

If extension cables are too long, this may lead to a voltage drop causing malfunctions or start-up difficulties.

Kränzle 1122 TST:

110 - 127 V ~, 14 A, 60 Hz



Check the line fusing and have the voltage and the available current intensity checked by an expert in case of uncertainty.

■ Electrical connection

The machine is supplied with a 5 meter electrical power cable with plug. The mains plug must be fitted to a standard grounded socket with a **30mA** residual current operated device. The socket must be protected **with a 16A delay action** fuse on the mains side.

When using an extension cable, this must have an earthed lead which is properly connected to the socket. The conductors in the extension cable must have a minimum cross section of **1.5 mm²**.

Plug connections must be of a spray-proof design, and may not be located on a wet floor. With extension cables of **more than 10 m** the minimum cross section must be **2.5 mm²**! When using a cable drum, always keep the cable wound as far as possible.

12 Kränzle technology

■ Water and cleaning system

Water can be connected at mains pressure (1-8 bar pre-pressure) to the high-pressure pump. The water is then forced under pressure by the high pressure pump to the lance. The high pressure jet is formed by the nozzle at the end of the lance.



Environmental, refuse disposal and water protection regulations must be observed!

■ Lance with trigger gun with safety catch

The machine can only be operated when the trigger of the trigger gun with safety catch is pulled. When the trigger is pulled, the trigger gun opens. The liquid is then pumped to the nozzle. The spray pressure increases and quickly reaches the selected operating pressure. When the trigger is released, the trigger gun closes and any further spraying of liquid from the lance is stopped. The pressure gauge must show 0 bar. When the trigger gun with safety catch is closed the increase in pressure causes the pressure control valve/safety valve to open. The motor is switched off by the pressure switch. When the trigger gun is opened, the pressure control valve/safety valve closes, the motor is started and the pump resumes pressure spraying from the lance with the selected operating pressure.



The trigger gun with safety catch is a safety device. Repairs should only be performed by qualified persons. Should replacement parts be required, use only components authorized by the manufacturer.

■ Pressure control valve - safety valve

The pressure control valve - safety valve protects the machine from a build up of excess pressure, and is designed not to permit an excess pressure to be selected for operation. The limit nut on the handle is sealed with a spray coating. The operating pressure and spray rate can be steplessly adjusted by turning the handle.



Replacements, repairs, new adjustments and sealing should only be performed by qualified persons.

■ Total stop system

Kränzle 1122 TS T high-pressure cleaners are equipped with a total stop system. If the main switch is switched on the motor is started by a pressure switch, as soon as the trigger gun with safety catch is operated. If the trigger gun is released the motor is switched off at once.

■ Motor protection switch

The motor is protected from overload by a motor protection switch, which cuts out the motor in the event of overload. However should the switch trip frequently, the cause of the malfunction should be located and rectified (see page 40).



Replacements and inspection work should only be performed by qualified persons when the machine is disconnected from the power supply, i.e. with plug pulled out from the electrical socket.

■ High pressure hose and spray device

The high pressure hose and spraying device supplied with the machine are made of high grade material, they are also optimized for the machine and marked as required by the appropriate regulations. (max. hose length 20 m)



If replacement parts are required, only such parts that are authorized by the manufacturer may be used. The warranty is automatically void if spare parts of third-party providers are used! The high pressure hose and spray device must be connected in a pressure-tight manner (without leakage).

The high pressure hose may not be driven over, pulled excessively, or twisted. The hose may under no circumstances be pulled over sharp edges. Defective high-pressure hoses must not be repaired (acc. to DIN 20022) but have to be replaced by new hoses approved by the manufacturer.

■ Explanatory symbols affixed to the high-pressure cleaner




Operate high-pressure cleaner in horizontal position only.
Never direct the high-pressure jet at people or animals.
Never direct the water jet at power sockets or any other electrical installations!



The high-pressure cleaner may only be operated in horizontal position!

14 Putting into operation

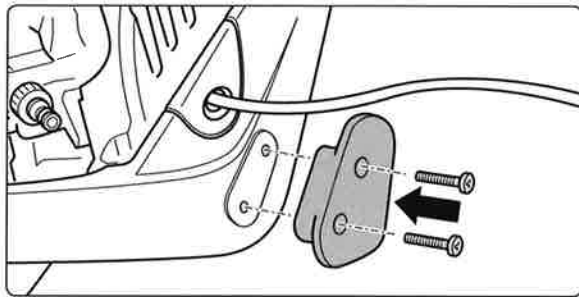


1. Screw bottom attachment hook for cable to the respective position on the frame.


■ Setting up – Location




Neither set up or operate the machine in rooms where there is a risk of fire or explosion nor put it into puddles. Do not use the machine under water.

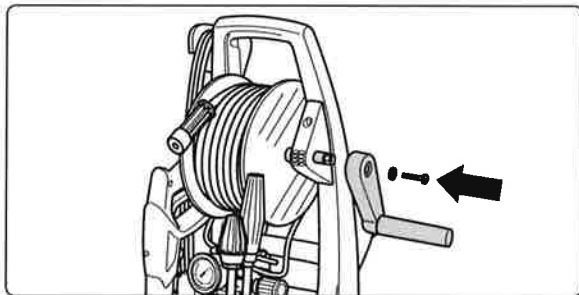

2. K 1122 TS T: Put up machine. Release fixing screw from hexagonal base of hose drum, put tiltable handle onto the hexagonal base and fix with screw.

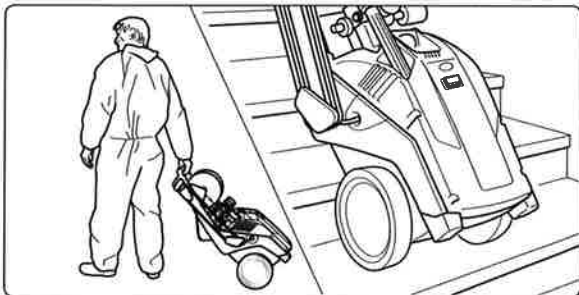


3. Move high-pressure cleaner to the job site. The Kränzle 1122 TS T is a movable machine with sturdy trolleys ideally suited for difficult terrain and stairs.

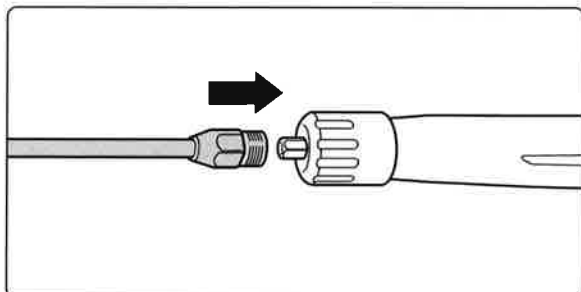


4. Push Vario-Jet lance or Dirtkiller lance on to trigger gun with safety catch.


Putting into operation

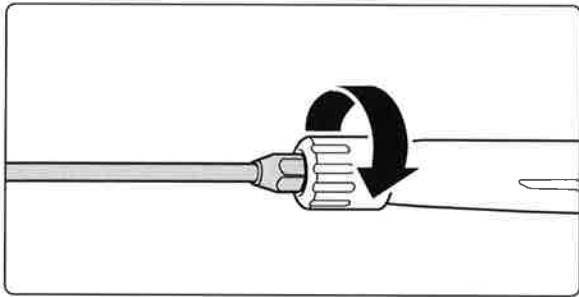


5. Screw together lance and trigger gun pressure-tightly.

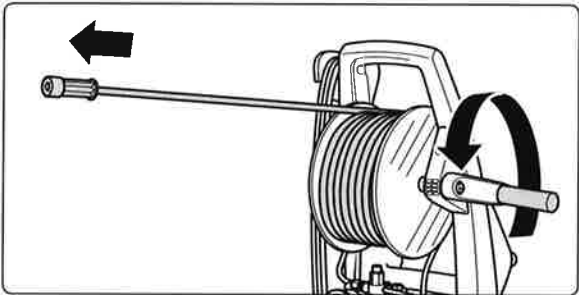


6. Unwind high-pressure hose straight and without nooses. (When using hose extensions take care that the max. length of 20 m is not exceeded!)

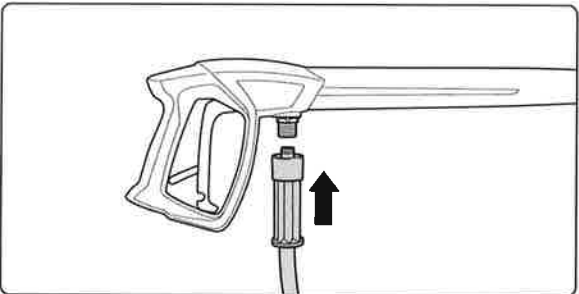

7. Push on high-pressure hose to trigger gun with safety catch.

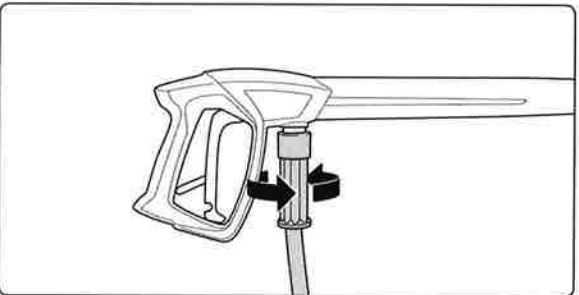

8. Tightly screw together high-pressure hose and trigger gun with safety catch.

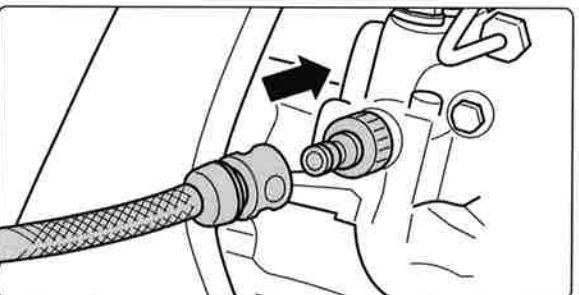


9. Connect water hose to water inlet.

The cleaner may be connected to a water mains (1-10 bar pre-pressure) with either cold or hot water (up to 60°C).

■ Be careful when using hot water!



When running your high pressure cleaner with hot water of 60° C raised temperatures occur. Do not touch the metal parts of the cleaner without safety gloves!

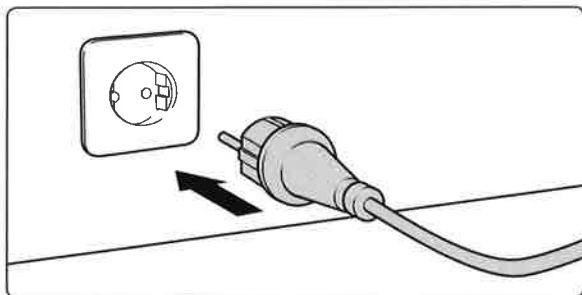


10. Connect to circuit.


Kränzle 1122 TS T:

110 - 127 V ~, 14 A, 60 Hz

The socket must be protected with a 16A delay action fuse on the mains side.

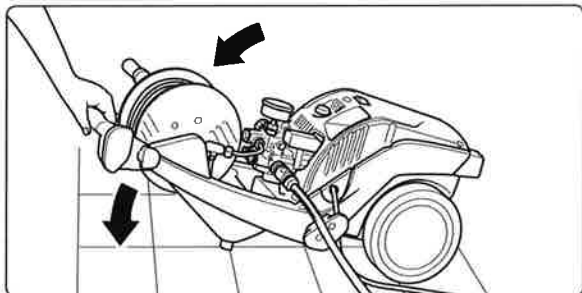


11. Put HP cleaner into horizontal position. **The machine must be operated in horizontal position!**

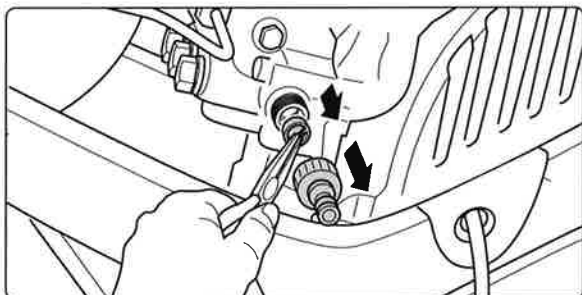

12. Check water inlet filter for cleanliness prior to putting the machine into operation!

Manually unscrew hose attachment. Take out the serial water inlet filter using needle nose pliers and clean if filter is soiled.

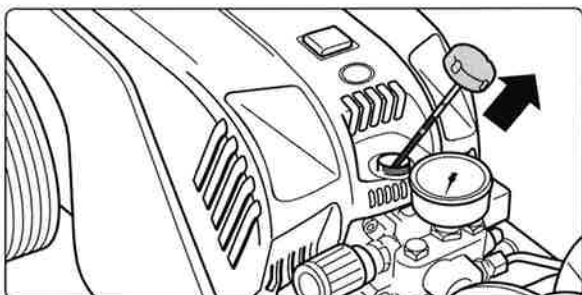

13. Prior to putting HP cleaner into operation always check oil level at oil-level glass.


(Make sure that cleaner is in horizontal position!) The oil level must reach the top edge of the "OK" marking.



14. Switch on HP cleaner with opened trigger gun (trigger pulled).


Bleeding of the machine: Pull and release trigger of trigger gun with safety catch several times.

Start cleaning task.

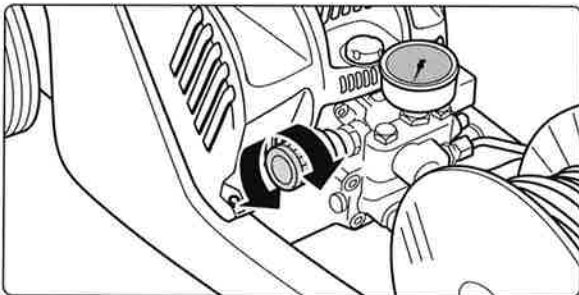

15. Steplessly adjust operating pressure with handwheel. The maximum pressure is adjusted ex work.

Kränzle 1122 TS T: max. 95 bar

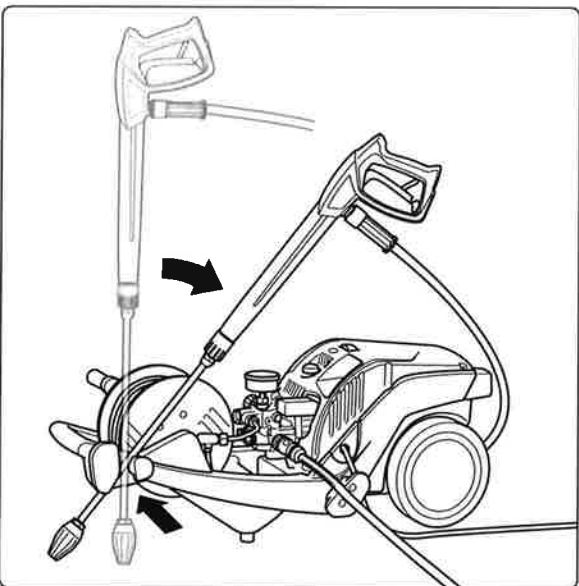


Kränzle 1122 TS T high-pressure cleaners are equipped with a practical holding device for trigger gun with Dirtkiller lance during breaks.


18 Suction of detergents

■ When using cleansing agents


Suction of cleansing agents by means of the detergent injector is only possible if the Vario Jet lance is fitted. The lance must be set to low pressure.

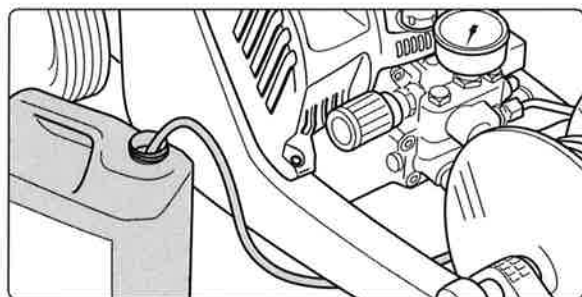

1. Please chemicals filter into container with cleansing agent.

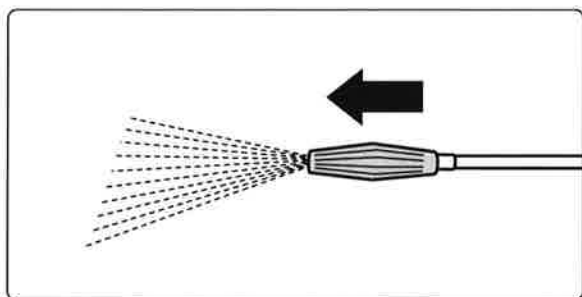

2. To reach the low pressure push Vario nozzle to the front so that the injector can suck in the cleansing agent.

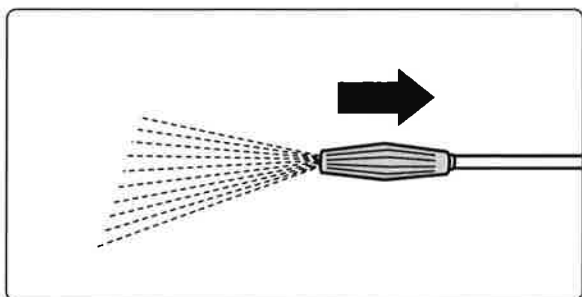

3. The chemicals supply is automatically stopped when closing the Vario nozzle by pushing it backwards. Let cleansing agent take effect and then spray off with a high-pressure jet.



Observe specifications of detergent manufacturer!
e.g. protective equipment, rules for waste water treatment etc.




Caution: Solvents!
Never suck in liquids containing solvents like varnish solvents, petrol, oil or similar liquid! Observe specifications of detergent manufacturers! Seals inside the appliance are not resistant against solvents! The spray mist of solvents is highly inflammable, explosive and poisonous.

To shut down the pump

1. Switch off the high-pressure cleaner
2. Cut off the water supply
3. Open the trigger gun with safety catch briefly until the pressure is released
4. Apply safety catch on the trigger gun
5. Remove water hose and trigger gun with safety catch
6. Drain the pump: switch on the motor for approx. 20 seconds
7. Pull the plug from the socket
8. Clean HP hose and wind up without loops
9. Clean power cable and wind up
10. Clean water filter
11. Store high-pressure cleaners in frost-free rooms in winter


■ Store in a place-saving manner

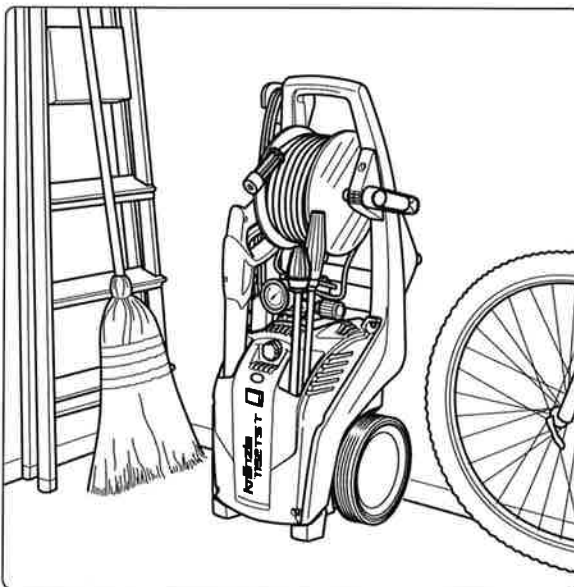

Due to their compact and space saving design the Kränzle 1152 TS T cleaners can be stored practically anywhere.

20 Small repairs - do it yourself!

■ **No water from the nozzle but the gauge shows full pressure:
Most likely the nozzle is blocked.**

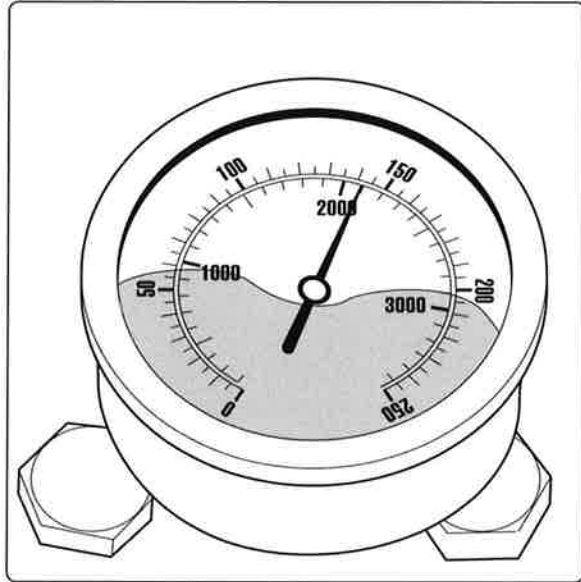

The pressure gauge shows full pressure, but emerges from the nozzle only little water or no water at all.


(Inside the pressure gauge there is no water but a filling with glycol to damp the vibration of the pointer.)

Proceeding:

Switch off the cleaner. Pull plug from the socket. Operate trigger gun with safety catch several times to decrease the pressure.

Unscrew trigger gun and lance first, then rinse high-pressure gun to remove possible soiling.

Check water inlet filter for soiling.

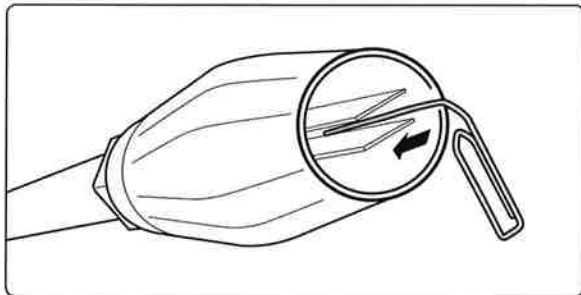


If the problem still exists, take wire (paper clip) and push through nozzle opening. If this procedure is not successful, the nozzle has to be dismantled and cleaned or even replaced, if necessary.




CAUTION! Pull plug from socket prior to starting any repair work!

■ Pressure gauge shows little pressure, the water from the nozzle comes in squirts: Most likely the valves are soiled or sticky.

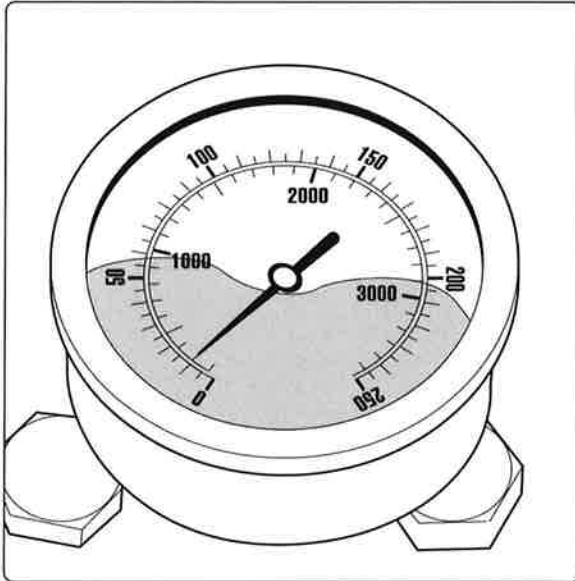


The pressure gauge shows little pressure despite fully turned up pressure regulation. The water from the lance comes in squirts. The HP hose vibrates.

(Inside the pressure gauge is no water but a filling with glycol to damp the vibration of the pointer.)

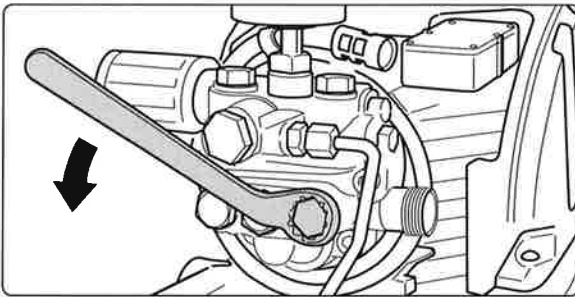


Proceeding:

Unscrew all 6 valves, one after the other (hexagonal brass screws, 3 in a row, vertically and horizontally)

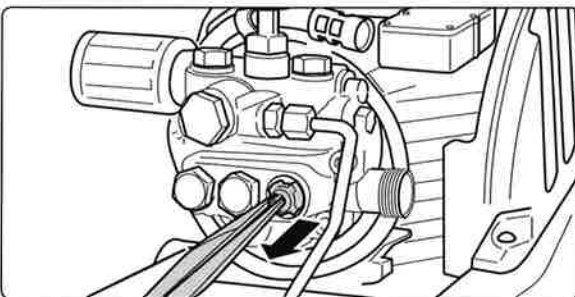

Take out valve body (with green or red plastic coating) and O-ring by means of needle nose pliers. Check O-ring for damage. In case of a damage the O-ring has to be replaced.

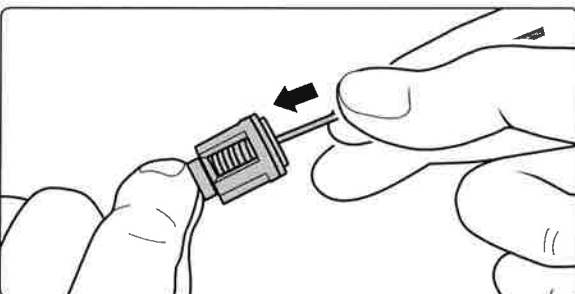


Take a wire (paper clip) and clean valves under running water.

Do not forget the O-ring during reassembly!

Small repairs - do it yourself!


■ The pressure gauge shows full pressure although the trigger gun with safety catch has been closed. The pressure switch valve switches constantly.

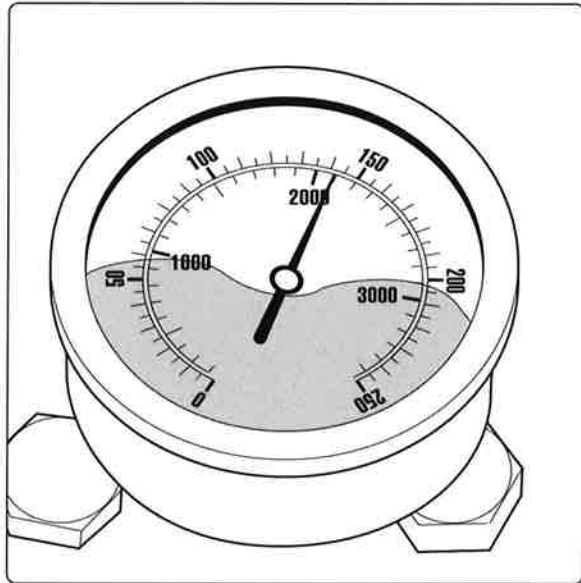

Possible cause no.1: Leakage

Having closed the trigger gun with safety catch, the HP cleaner must shut down and the pressure gauge must show „0“ bar.


If the pressure gauge shows full pressure but the motor constantly switches on and off, a leakage at the pump, at the high-pressure hose, at the trigger gun or at the lance can be the reason.

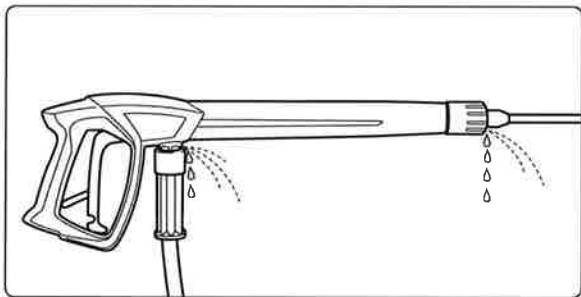

Proceeding:

Check connections from the HP cleaner to the high-pressure hose and from the hose to the trigger gun and also the connection between lance and trigger gun for tightness.

Switch off the cleaner. Shortly press the trigger of the trigger gun with safety catch to decrease the pressure.

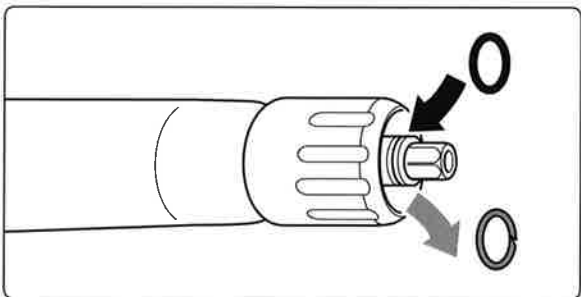

Unscrew HP hose, trigger gun with safety catch and lance and check the O-rings.


If the O-rings are damaged they have to be replaced.



In case of a leakage there is no guarantee for possible consequential damages.


■ The pressure gauge shows full pressure although the trigger gun with safety catch has been closed. The motor constantly switches on and off.

Possible cause no. 2: The non-return valve is soiled or defective.

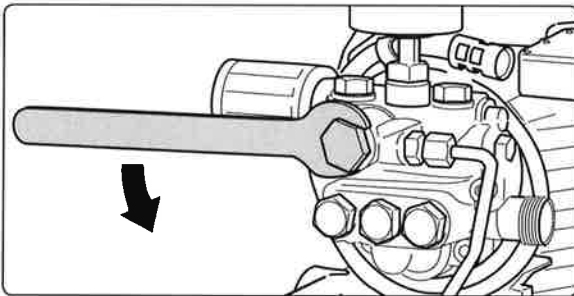


Proceeding:

Switch off the HP cleaner and pull plug from socket. Stop water supply. Unscrew pump outlet.

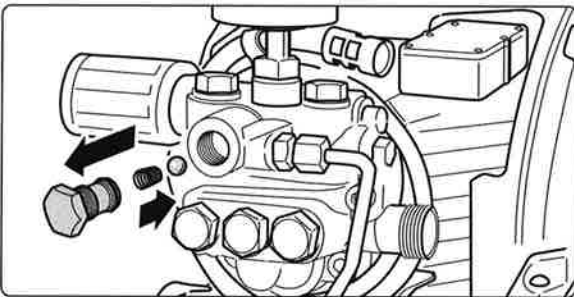

Take out check ball and check for soiling or damage.

Also check stainless steel seat of ball inside the pump housing for soiling or damage.

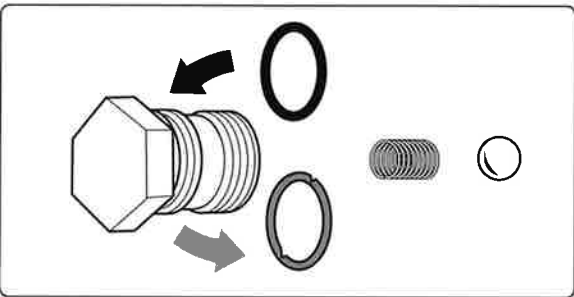

If sealing rings are defective replace O-rings at once.



There is no guarantee if the pump is damaged by defective O-rings due to air induction or lack of water (cavitation).

EC declaration of conformity

Hereby we declare that: **Kränzle 1122 TST**

technical specifications available from: **Manfred Bauer, Fa. Josef Kränzle
Rudolf-Diesel-Str. 20, 89257 Illertissen**

Nominal flow **K 1122 TST: 500 l/h**

comply with the following guidelines
and their amendments for high-pressure
cleaners: **Machinery directive 2006/42/EC
EMC-directive 2004/108/EC
Noise directive 2005/88/EC, Art. 13
HP water spraying machines
Annex 3, part B, chapter 27**

Sound level measured: **91 dB (A)**
Sound level guaranteed: **93 dB (A)**

Applied conformity assessment
procedure: **Annex V, Noise directive 2005/88/EC**

Applied specifications and standards: **EN 60 335-2-79 :2009
EN 55 014-1 :2006
EN 61 000-3-2 :2006
EN 61 000-3-3 :2008**

I. Kränzle GmbH
Elpke 97 D - 33605 Bielefeld

Bielefeld, Sept. 03.12.2012



Kränzle Josef
(Managing director)

Guarantee

■ The guarantee is only valid for material and manufacturing errors.
Wearing does not fall within this guarantee.

The instructions in our operating manual must be complied with.
The operating instructions form part of the guarantee.

For high-pressure cleaners sold to the user the guarantee period is **24 month**.
For high-pressure cleaners sold for industrial use the guarantee period is **12 month**.

In the case of a guarantee please contact your dealer or authorized seller delivering accessories and your purchase receipt. You can find them in the internet under **www.kraenzle.com**.


The guarantee is also void if the machine is used with exceeding the temperature and speed limits, a voltage below the required rating, with less than the required amount of water or with dirty water.

Pressure gauge, nozzle, valves, sleeves, high pressure hose and spray equipment are wear parts and are not covered by the guarantee.

26 Versatile due to Kränzle accessories




Rotating washing brush with 400 mm extension, Order no. 41 050 1



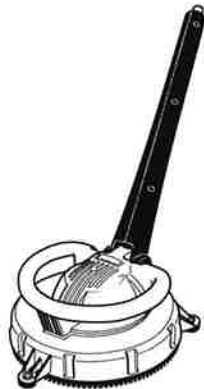


**Floor cleaner round cleaner UFO
Order no. 41.850**




**Dirtkiller lance with stainless steel pipe
400 mm, Order no. 41.072 5**

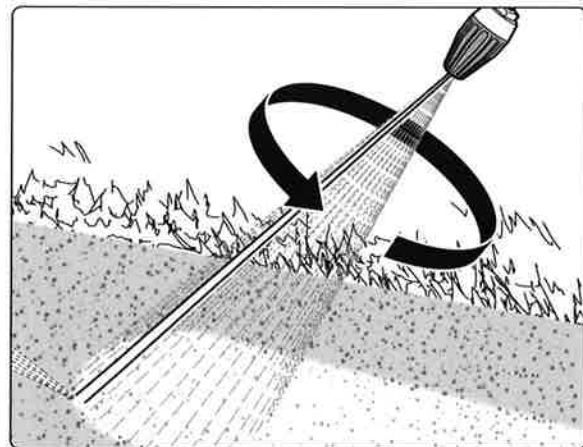

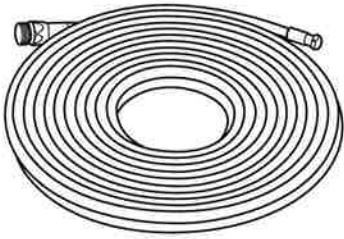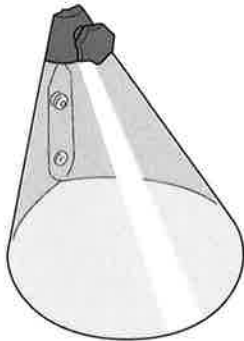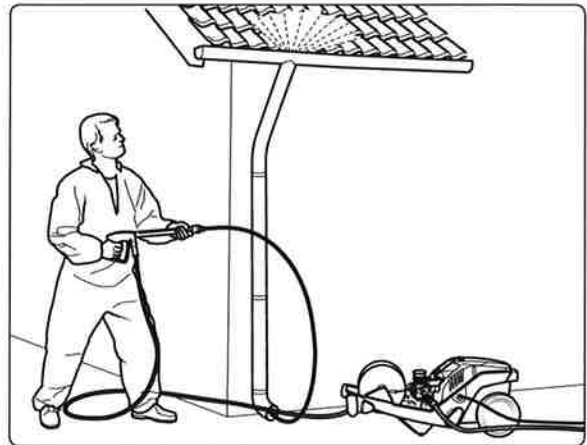**Pipe cleaning hose with nozzle,****10 m** - order no. 41.058 1**15 m** - order no. 41.058**20 m** - order no. 41.058 2**25 m** - order no. 41.058 3**30 m** - order no. 41.058 4**Spray guard**


Order no. 41.052

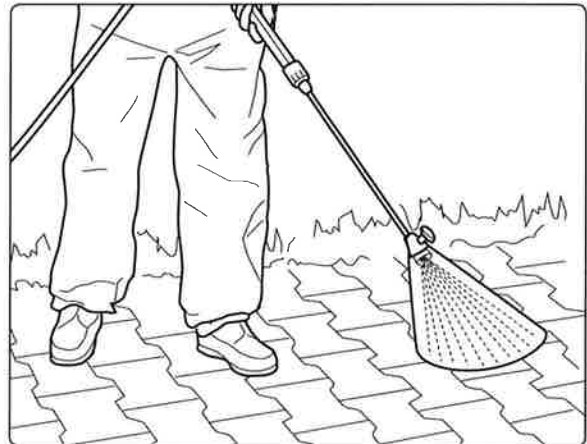

All accessories for high-pressure cleaners are safety components! These, in particular, include high-pressure hoses, trigger guns with safety catch, high-pressure lances, pipe cleaning hoses, surface cleaners, etc.


If components are used which are not approved by Kränzle any guarantee is rendered void.

28 Ersatzteilliste

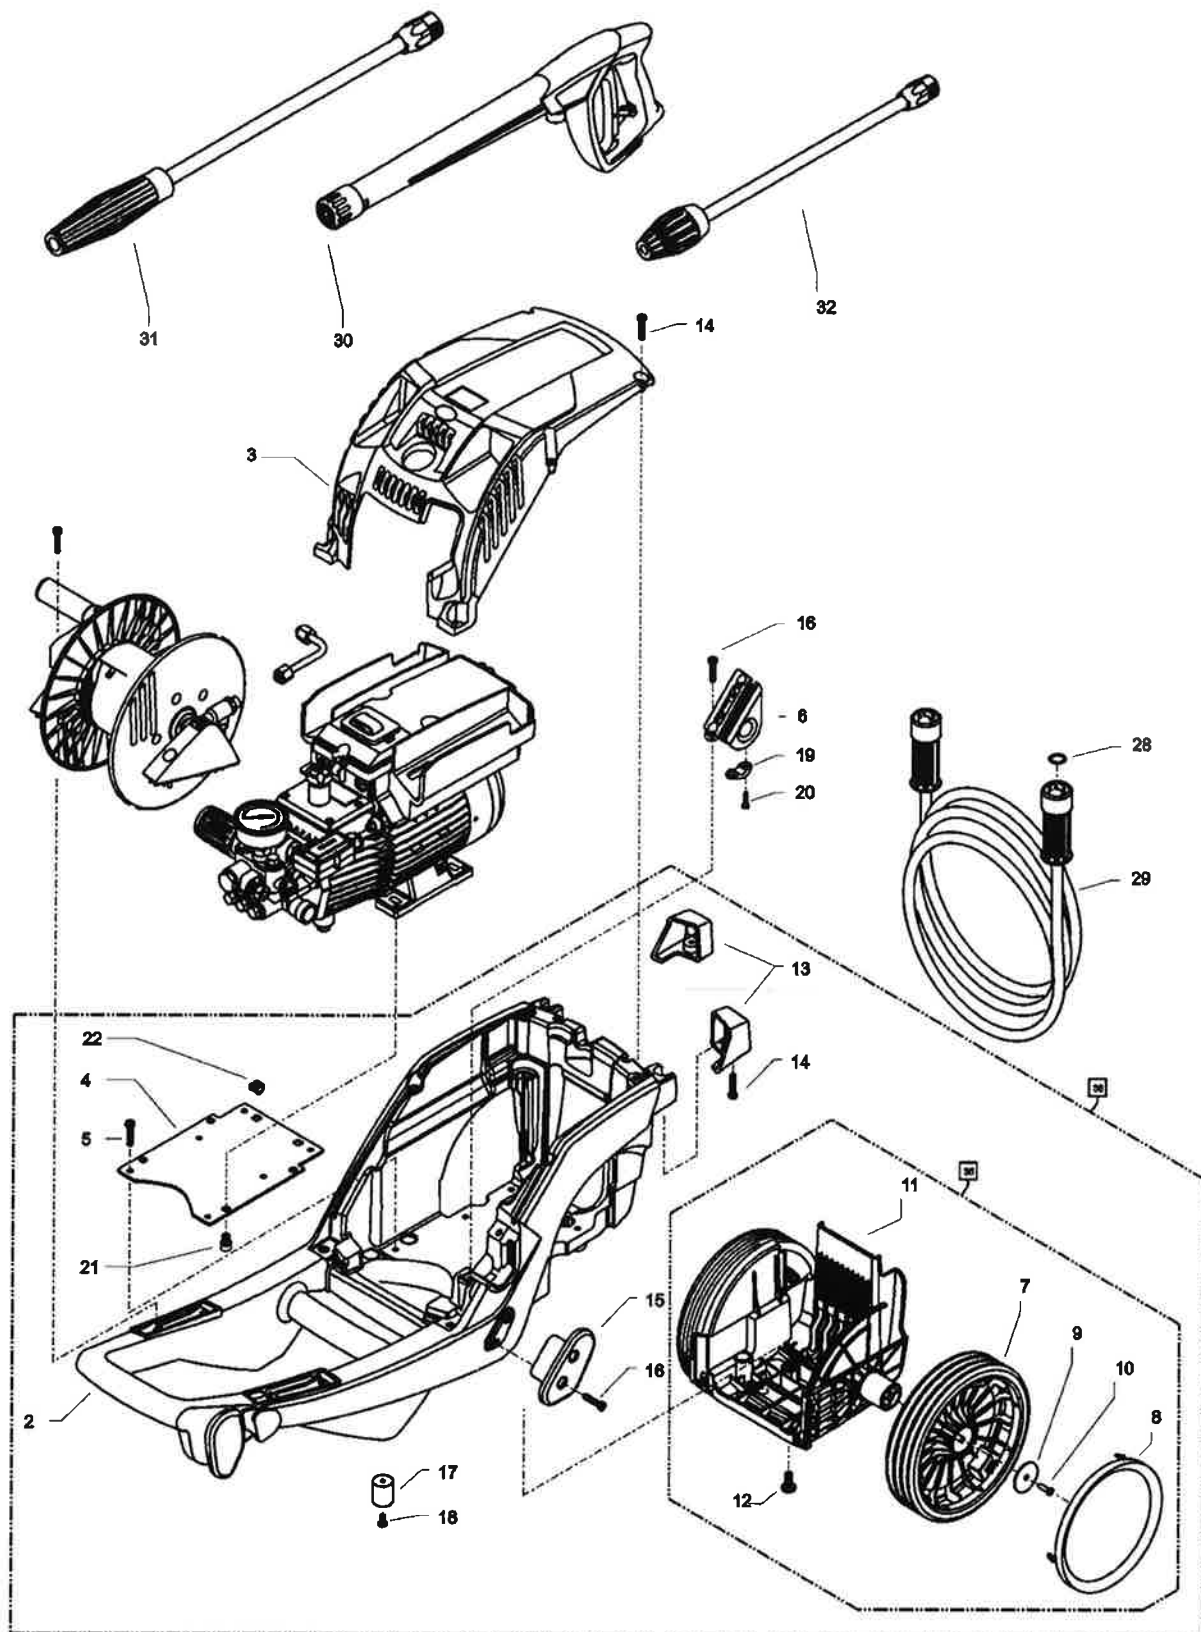


2	2 Fahrgestell 1 49.000	2 chassis 1 49,000
3	3 Frontplatte „ K 1122 TST“ 1	3 front panel "K 1122 TST" 1
4	4 Versteifungsplatte 1 49.008	4 stiffening plate 1 49.008
5	5 Kunststoffschraube 6,0 x 30 6 43.423	5 plastic screw 6.0 x 30 6 43.423
6	6 Kabeltrompete 1 49.003	6 Cable trumpet 1 49.003
7	7 Rad 2 44.538	7 wheel 2 44,538
8	8 Radkappe 2 45.200 8	8 wheel cap 2 45.200 8
9	9 Scheibe 40 x 6 x 1,5 (Stahl) 2 45.216 7	9 washer 40 x 6 x 1.5 (steel) 2 45.216 7
10	10 Kunststoffsenkschraube 5,0 x 20 2 45.421	10 plastic countersunk screw 5.0 x 20 2 45.421
11	11 Achshalter 1 49.001	11 axle holders 1 49.001
12	12 Schraube M 6 x 35 2 49.015	12 screw M 6 x 35 2 49.015
13	13 Standfuss links+rechts 1 48.005	13 Stand left + right 1 48.005
14	14 Schraube 5,0 x 30 8 43.418	14 screw 5.0 x 30 8 43.418
15	15 Kabelaufwicklung K1152 1 49.002	15 Cable rewind K1152 1 49.002
16	16 Schraube 5,0 x 20 2 43.018	16 screw 5.0 x 20 2 43.018
17	17 Gummi-Anschlag-Dämpfer 25 x 30 2 49.010	17 rubber stop shocks 25 x 30 2 49.010
18	18 Schraube 5,0 x 14 2 43.426	18 screw 5.0 x 14 2 43.426
19	19 Kabelklemme 1 43.431	19 Cable clamp 1 43.431
20	20 Schraube 3.5 x 16 2 44.161	20 screw 3.5 x 16 2 44.161
21	21 Schraube M 8 x 12 4 40.122	21 Screw M 8 x 12 4 40.122
22	22 Käfigmutter M6 2 48.011	22 Cage nut M6 2 48.011
28	28 O-Ring 9,3 x 2,4 2 13.273	28 O-ring 9.3 x 2.4 2 13.273
29	29 HD-Schlauch NW 6 15 m 1 48.015	29 HD hose NW 6 15 m 1 48.015
30	30 Pistole M2000 1 12.480	30 pistol M2000 1 12,480
31	31 Vario-Jet 042 kpl. mit Lanze 1 41.156	31 Vario-Jet 042 cpl. with lance 1 41.156
32	32 Schmutzkiller 042 1 41.072 5	32 Dirt killers 042 1 41.072 5
35	35 Achse kpl. mit Räder 1 49.050	35 axis cpl. with wheels 1 49,050
36	36 Fahrgestell kpl. 1 49.051	36 chassis complete 1 49,051

30 Ersatzteilliste

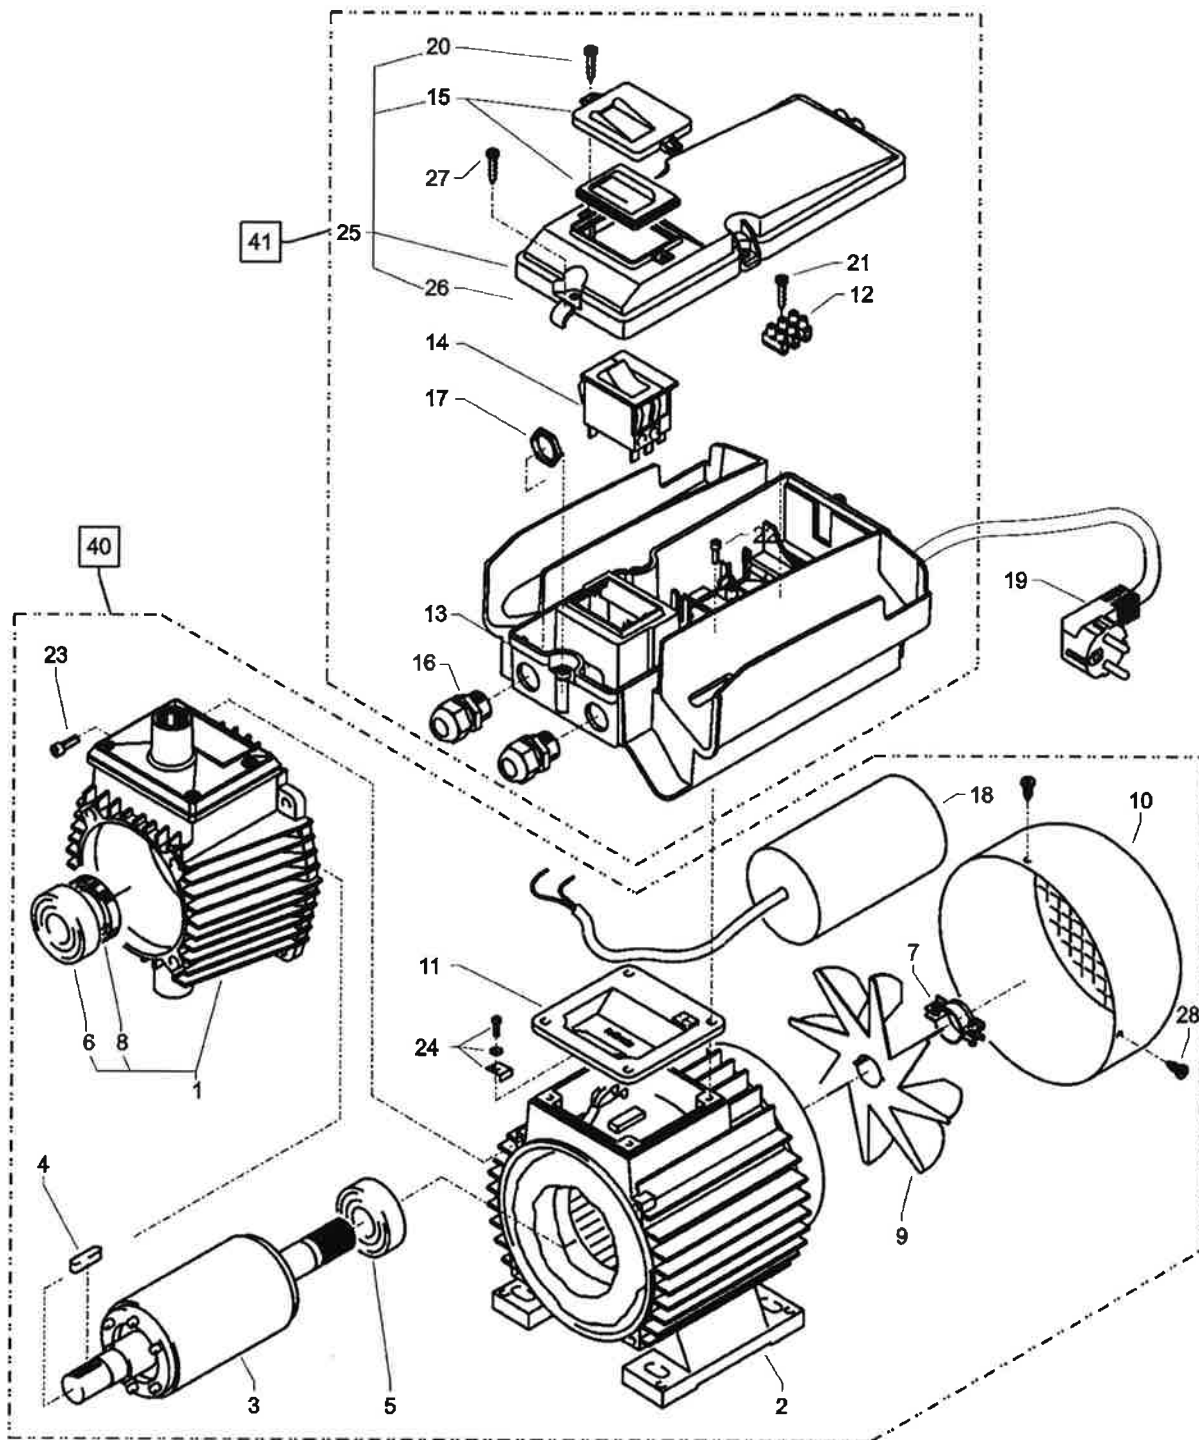


1 Ölgehäuse mit Dichtung, Deckel Öldichtung, Schulterlager 1 44.501 3	1 oil housing with gasket, cover Oil seal, shoulder bearing 1 44.501 3
2 Motorgehäuse mit Stator 1 23.002 4	2 Motor housing with stator 1 23.002 4
3 Motorwelle mit Rotor 1 43.024	3 motor shaft with rotor 1 43.024
4 Passfeder 6 x 6 x 20 1 41.483 1	4 feather key 6 x 6 x 20 1 41.483 1
5 Motor-Lager B-Seite Z-Lager 1 43.025	5 Engine Bearing B-side Z Bearing 1 43.025
6 Motor-Lager A-Seite Schulterl. 1 43.026	6 engine bearings A side shoulder. 1 43,026
7 Schelle für Lüfterrad 1 44.534 1	7 clamp for fan 1 44.534 1
8 Öldichtung 25 x 35 x 7 1 41.024	8 oil seal 25 x 35 x 7 1 41.024
9 Lüfterrad 1 44.534	9 fan 1 44,534
10 Lüfterhaube 1 41.497	10 Fan cover 1 41.497
11 Flachdichtung 1 44.513	11 Flat gasket 1 44.513
12 Lüsterklemme 3-pol. 1 43.031 2	12 luster terminal 3-pol. 1 43.031 2
13 Schaltkasten 1 49.004	13 control box 1 49.004
14 Schalter mit 12 A-Überstromauslöser 1 43.033	14 switch with 12 A overcurrent release 1 43.033
15 Klemmrahmen mit Schalterabdichtung 1 43.453	15 Clamping frame with switch seal 1 43.453
16 Kabelverschraubung PG 13,5 2 40.536	16 Cable gland PG 13.5 2 40.536
17 Gegenmutter PG 13,5 2 44.253	17 Locknut PG 13.5 2 44.253
18 Kondensator 40 µF 1 43.035	18 capacitor 40 µF 1 43.035
19 Netzkabel für 230V / 50/60Hz 1 41.092	19 power cable for 230V / 50 / 60Hz 1 41.092
20 Blechschraube 3,5 x 9,5 2 41.088	20 sheet metal screw 3.5 x 9.5 2 41.088
21 Blechschraube 2,9 x 16 1 43.036	21 Self-tapping screw 2.9 x 16 1 43.036
22 Innensechskantschr. M 5 x 12 4 40.134	22 hexagon socket M 5 x 12 4 40,134
23 Innensechskantschr. M 5 x 30 4 42.130	23 hex. M 5 x 30 4 42.130
24 Erdungsschraube kpl. 1 43.038	24 grounding screw cpl. 1 43,038
25 Deckel für Schaltkasten 1 49.005	25 Cover for switch box 1 49.005
26 Dichtung für Deckel 1 49.012	26 Seal for cover 1 49.012
27 Kunststoffschraube 5,0 x 20 4 43.018	27 plastic screw 5.0 x 20 4 43.018
28 Blechschraube 3,9 x 13 3 41.078	28 Self-tapping screw 3.9 x 13 3 41.078
40 Motor 230V / 50 Hz komplett mit Ölgehäuse 1 44.530 und Lüfterrad, ohne Elektrik	40 motor 230V / 50 Hz complete with oil housing 1 44.530 and fan, without electricity
41 Schaltkasten komplett 1 49.013	41 control box complete 1 49.013

32 Ersatzteilliste

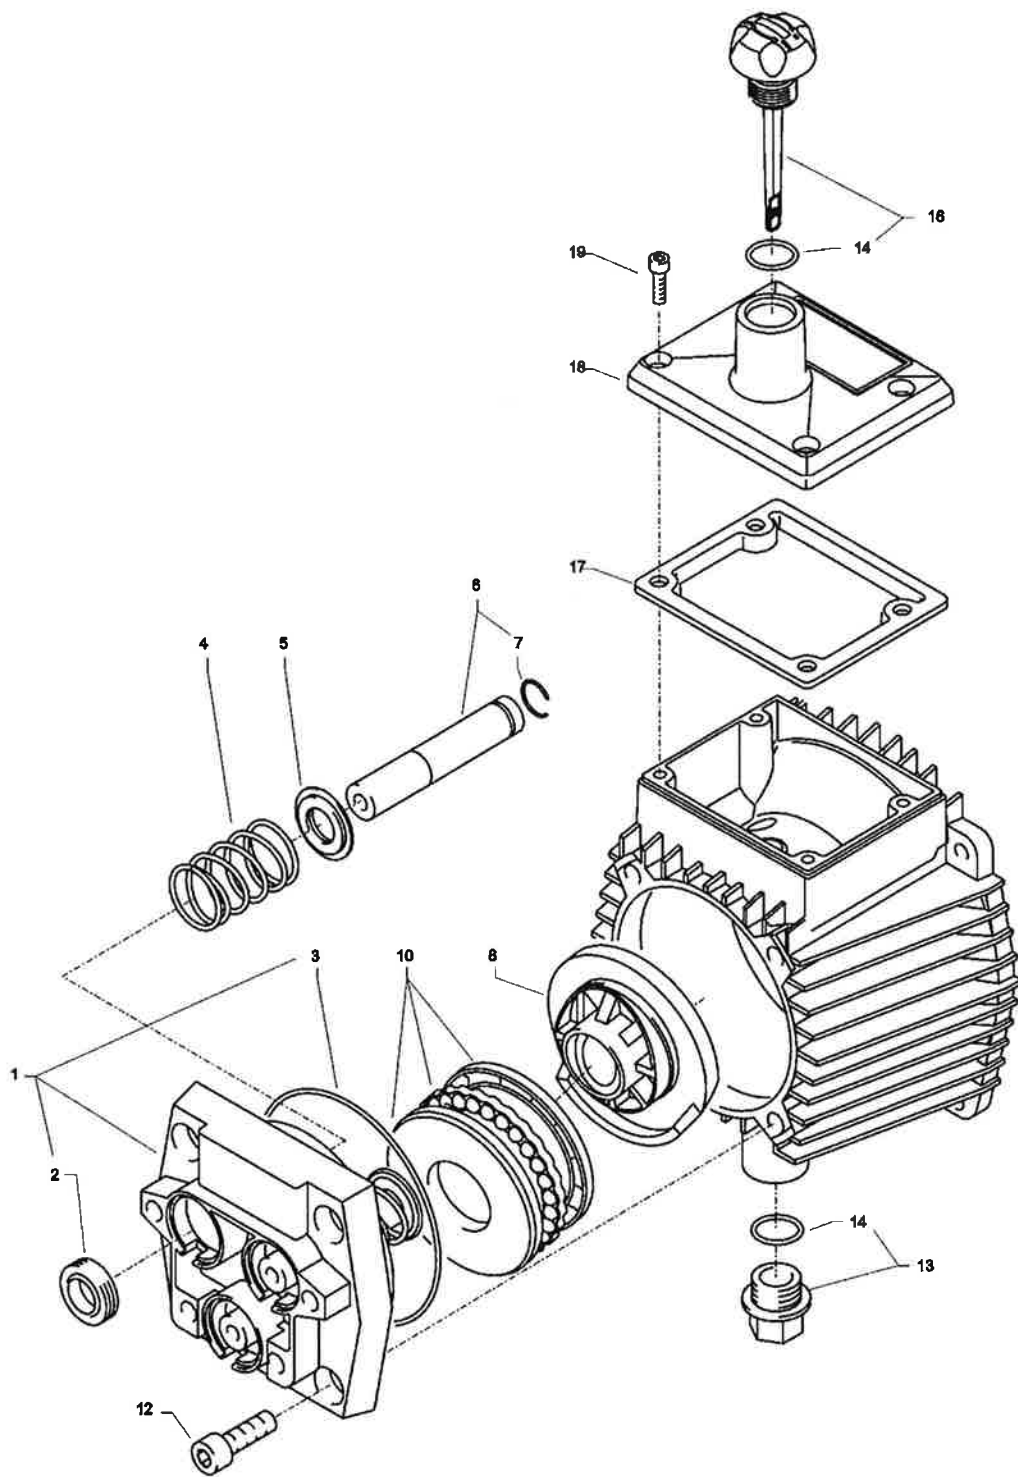

1 Gehäuseplatte 1 43.003	1 housing plate 1 43.003
2 Öldichtung 14 x 24 x 7 3 41.631	2 oil seal 14 x 24 x 7 3 41,631
3 O-Ring 83 x 2 1 43.039	3 O-ring 83 x 2 1 43.039
4 Plungerfeder 3 43.040	4 plunger spring 3 43.040
5 Federdruckscheibe 14 mm 3 43.041	5 spring pressure washer 14 mm 3 43.041
6 Plunger 14 mm AZ-L 3 49.021	6 plungers 14 mm AZ-L 3 49.021
7 Sprengring 14 mm 3 41.635	7 snap ring 14 mm 3 41.635
8 Taumelscheibe 9,25° 1 41.028-9,25	8 Swashplate 9.25 ° 1 41.028-9.25
10 Axial-Rillenkugellager 3-teilig 1 43.486	10 Axial deep groove ball bearings 3-piece 1 43.486
12 Innensechskantschraube M 8 x 25 4 40.053	12 hexagon socket screw M 8 x 25 4 40.053
13 Ölablassstopfen M18x1,5 mit Magnet 1 48.020	13 Oil drain plugs M18x1.5 with magnet 1 48.020
14 O-Ring 14 x 2 1 43.445	14 O-ring 14 x 2 1 43.445
16 Ölmesstab 1 49.009	16 Oil dipstick 1 49.009
17 Dichtung Öldeckel 1 44.501 1	17 Seal Oil cover 1 44.501 1
18 Deckel Ölgehäuse 1 44.501 2	18 Oil housing cover 1 44.501 2
19 Innensechskantschraube M 5 x 12 4 41.019 4	19 Allen screw M 5 x 12 4 41.019 4

34 Ersatzteilliste

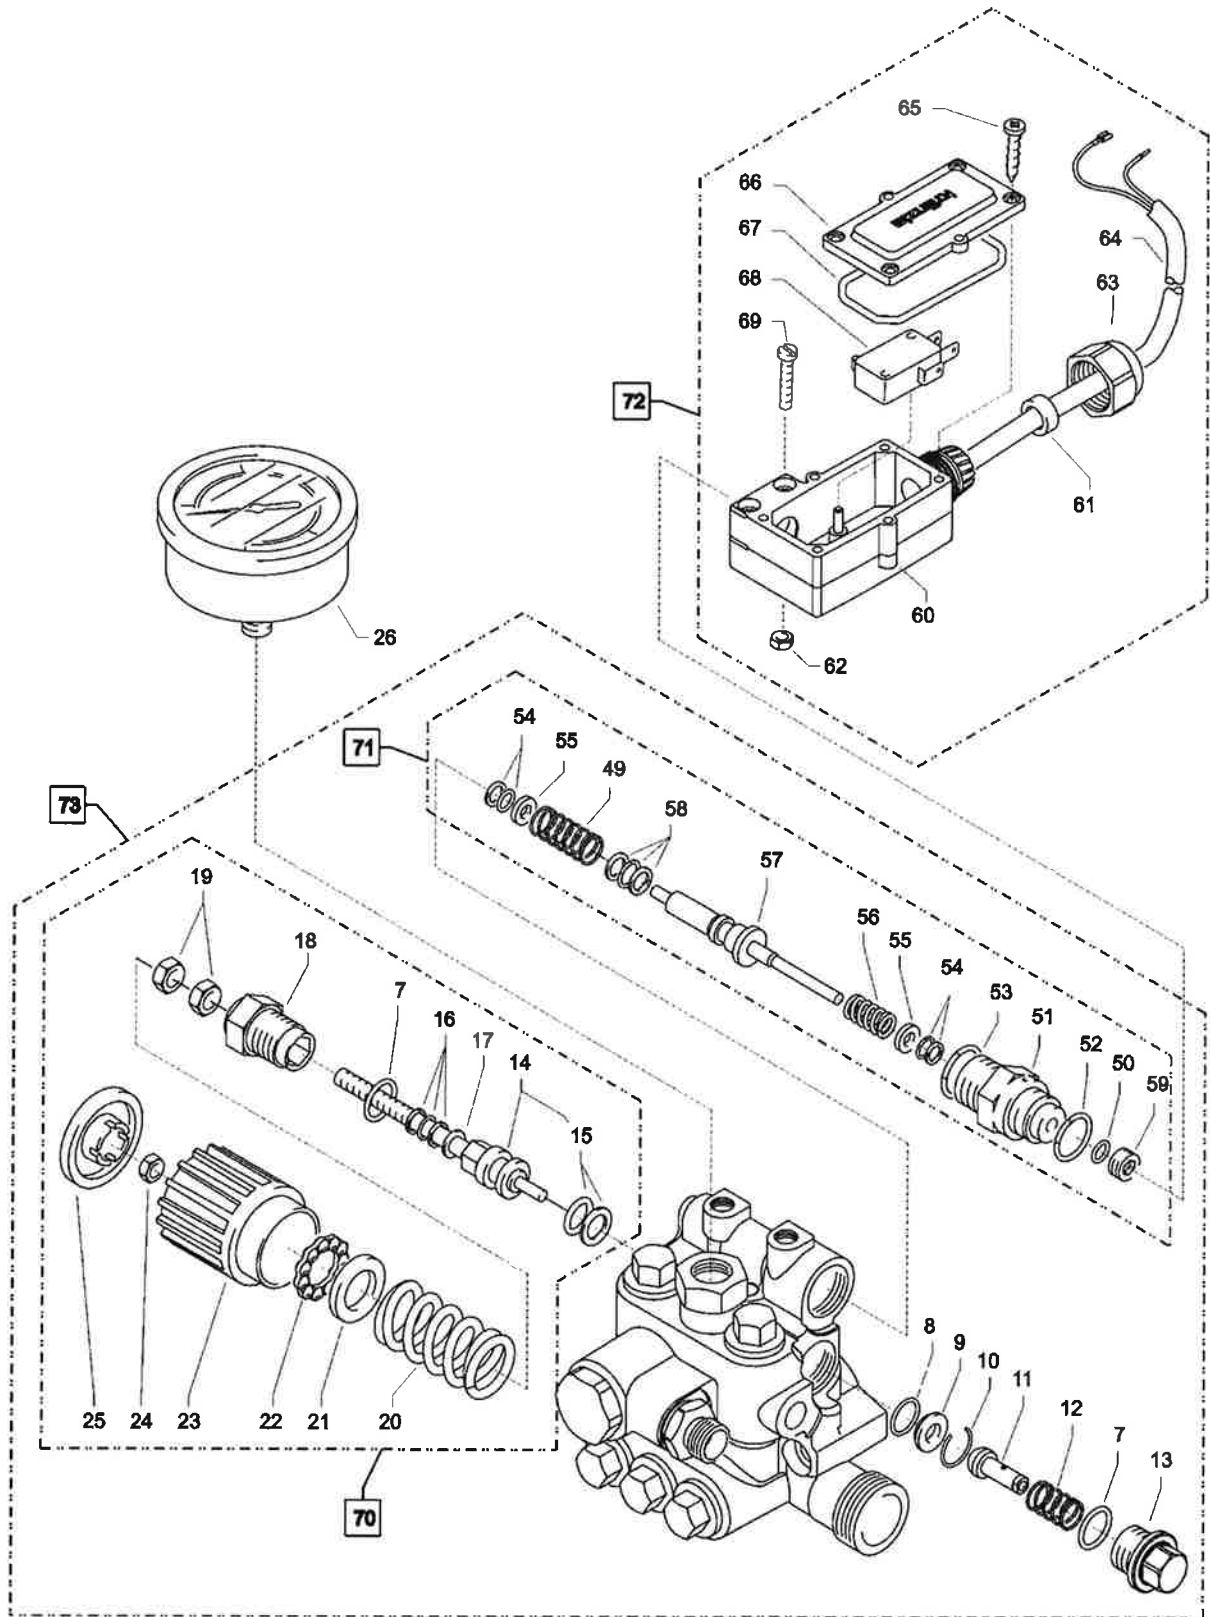


7 O-Ring 12 x 2 2 15.005 1
8 O-Ring 11 x 1,5 1 12.256
9 Edelstahlsitz 1 14.118
10 Sicherungsring 1 12.258
11 Anlaufentlastungsventil 1 49.040
12 Edelstahlfeder 1 14.119
13 Verschlusschraube 1 14.113
14 Steuerkolben 6 mm für AZ mit Dichtungen 1 44.532
15 Parbaks für Kolben 14 mm 1 14.123 1
16 Parbaks für Spindel 6 mm 1 14.123 2
17 MS-Scheibe 1 43.045
18 Kolbenführung 6 mm 1 14.130 1
19 Mutter M 6 2 14.127 1
20 Feder schwarz für AZ-Pumpe 1 43.046
21 Federdruckscheibe 1 43.047
22 Kugellager 1 43.048
23 Handrad M 6 für AZ-Pumpe 1 43.049
24 Mutter M 6 mit SW 8 1 43.010
25 Kappe für Handrad AZ-Pumpe 1 43.050
26 Manometer 1 15.039
49 Druckfeder 1 x 8,6 x 30 1 40.520
50 O-Ring 3,3 x 2,4 1 12.136
51 Führungsteil Steuerstößel 1 15.009 1
52 O-Ring 13 x 2,6 1 15.017
53 O-Ring 14 x 2 1 43.445
54 Parbaks 4 mm 2 12.136 2
55 Stützscheibe 2 15.015 1
56 Edelstahlfeder 1 15.016
57 Steuerstößel lang 1 15.010 2
58 Parbaks 7 mm 1 15.013
59 Stopfen M10x1 (durchgebohrt) 1 13.385 1
60 Gehäuse Elektroschalter 1 15.204
61 Gummimanschette 1 15.202
62 Sechskant-Mutter M 4 2 12.138
63 Überwurfmutter PG 11 1 15.203
64 Kabel 2 x 1,5 mm² 1 44.552
65 Blechschraube 2,8 x 16 6 15.024
66 Deckel Elektroschalter 1 15.201
67 O-Ring 44 x 2,5 1 15.023
68 Mikroschalter 1 15.018
69 Zylinderschraube M 4 x 22 2 15.025
70 Steuerkolben kpl. m. Handrad 44.532 1
71 Rep.-Satz Druckschaltermechanik 15.009 3

7 O-ring 12 x 2 2 15.005 1
8 O-ring 11 x 1.5 1 12.256
9 stainless steel seat 1 14.118
10 Circlip 1 12.258
11 Start relief valve 1 49.040
12 stainless steel spring 1 14.119
13 screw plug 1 14.113
14 Control spools 6 mm for AZ with seals 1 44.532
15 parbaks for pistons 14 mm 1 14.123 1
16 parbaks for spindle 6 mm 1 14.123 2
17 MS disc 1 43.045
18 piston guide 6 mm 1 14.130 1
19 Mother M 6 2 14,127 1
20 spring black for AZ pump 1 43.046
21 spring pressure disk 1 43.047
22 ball bearings 1 43.048
23 Handwheel M 6 for AZ pump 1 43.049
24 nut M 6 with SW 8 1 43.010
25 Cap for handwheel AZ pump 1 43.050
26 pressure gauge 1 15,039
49 compression spring 1 x 8.6 x 30 1 40.520
50 O-ring 3.3 x 2.4 1 12.136
51 Guide part Control ram 1 15.009 1
52 O-ring 13 x 2.6 1 15.017
53 O-ring 14 x 2 1 43.445
54 Parbaks 4 mm 2 12.136 2
55 supporting disk 2 15.015 1
56 stainless steel spring 1 15.016
57 Control tappet long 1 15.010 2
58 parbaks 7 mm 1 15.013
59 plug M10x1 (drilled through) 1 13.385 1
60 Housing Electric switch 1 15.204
61 Rubber sleeve 1 15.202
62 hex nut M 4 2 12.138
63 Union nut PG 11 1 15.203
64 cables 2 x 1.5 mm² 1 44.552
65 Self-tapping screw 2.8 x 16 6 15.024
66 Electric switch cover 1 15.201
67 O-ring 44 x 2.5 1 15.023
68 microswitch 1 15.018
69 Cylinder head screw M 4 x 22 2 15.025
70 control piston cpl. m. Handwheel 44.532 1
71 Rep. Set of Pressure Switch Mechanics 15.009 3

72 Druckschalter kpl. ohne Mechanik 49.054
73 Ventilgehäuse kpl. für K1152 TST 49.052


72 pressure switch cpl. without mechanics 49,054
73 valve body cpl. for K1152 TST 49.052

36 Ersatzteilliste

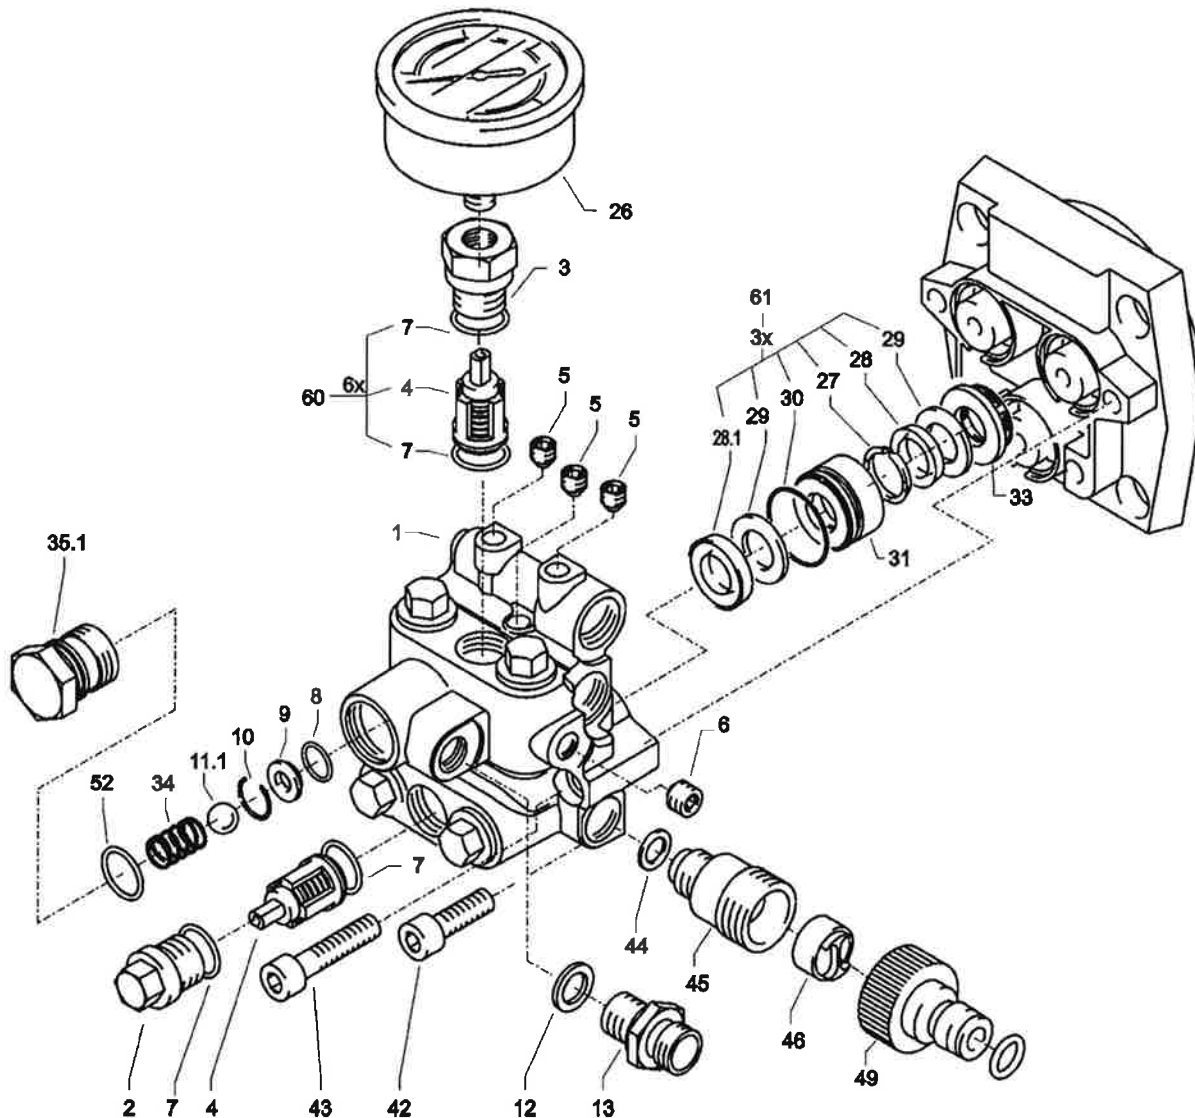


1 Ventilgehäuse 1 49.020	1 valve body 1 49.020
2 Ventilstopfen 5 41.011	2 valve plugs 5 41.011
3 Ventilstopfen mit R1/4" IG 1 41.011 1	3 valve plugs with R1 / 4 "IG 1 41.011 1
4 Ventile (rot) 6 41.612	4 valves (red) 6 41.612
5 Dichtstopfen M 8 x 1 3 13.158	5 sealing plugs M 8 x 1 3 13.158
6 Dichtstopfen M 10 x 1 1 43.043	6 sealing plugs M 10 x 1 1 43.043
7 O-Ring 12 x 2 12 15.005 1	7 O-ring 12 x 2 12 15.005 1
8 O-Ring 11 x 1,5 1 12.256	8 O-ring 11 x 1.5 1 12.256
9 Edelstahl Sitz 1 14.118	9 stainless steel seat 1 14.118
10 Sicherungsring 1 12.258	10 Circlip 1 12.258
11.1 Edelstahlkugel 10,0 mm 1 12.122	11.1 Stainless steel ball 10.0 mm 1 12.122
12 Aluminium - Dichtring 3 13.275	12 aluminum sealing ring 3 13.275
13 Verschraubung Ermeto R1/4" x 8 1 41.042	13 Bolt Ermeto R1 / 4 "x 8 1 41.042
26 Manometer 1 15.039	26 pressure gauge 1 15,039
27 Stützring 3 41.618	27 Support ring 3 41.618
28 Manschette 14 x 24 x 5/2,5 3 41.613	28 cuff 14 x 24 x 5 / 2.5 3 41.613
28.1 Gewebe-Manschette 14 x 24 x 5/2,5 3 41.613 1	28.1 Tissue Cuff 14 x 24 x 5 / 2.5 3 41.613 1
29 Backring 14 x 24 6 41.614	29 baking ring 14 x 24 6 41.614
30 O-Ring 24 x 2 3 49.024	30 O-ring 24 x 2 3 49.024
31 Leckagering 3 49.022	31 leakage ring 3 49.022
33 Zwischenring mit Abstützung 3 43.055	33 intermediate ring with support 3 43.055
34 Rückschlagfeder 1 14.120 1	34 Return spring 1 14.120 1
35.1 Ausgangsteil (TST) 1 40.522	35.1 Exit section (TST) 1 40.522
42 Innensechskantschr. M 8 x 25 - A2 2 40.053	42 hexagon socket M 8x25 - A2 2 40,053
43 Innensechskantschr. M 8 x 45 - A2 2 41.017	43 hexagon socket M 8 x 45 - A2 2 41.017
44 Dichtring Kupfer 1 14.149	44 Sealing ring copper 1 14.149
45 Sauganschluss 1 41.016	45 Suction connection 1 41.016
46 Wasserfilter 1 41.046 2	46 Water Filter 1 41.046 2
49 Steckkupplung 1 41.047 2	49 Plug-in coupling 1 41.047 2
52 O-Ring 18 x 2 1 43.446	52 O-ring 18 x 2 1 43.446
60 Reparatur-Satz Ventile 41.648	60 repair kit valves 41.648
61 Reparatur-Satz Manschetten 49.053	61 repair kit cuffs 49,053

38 Ersatzteilliste

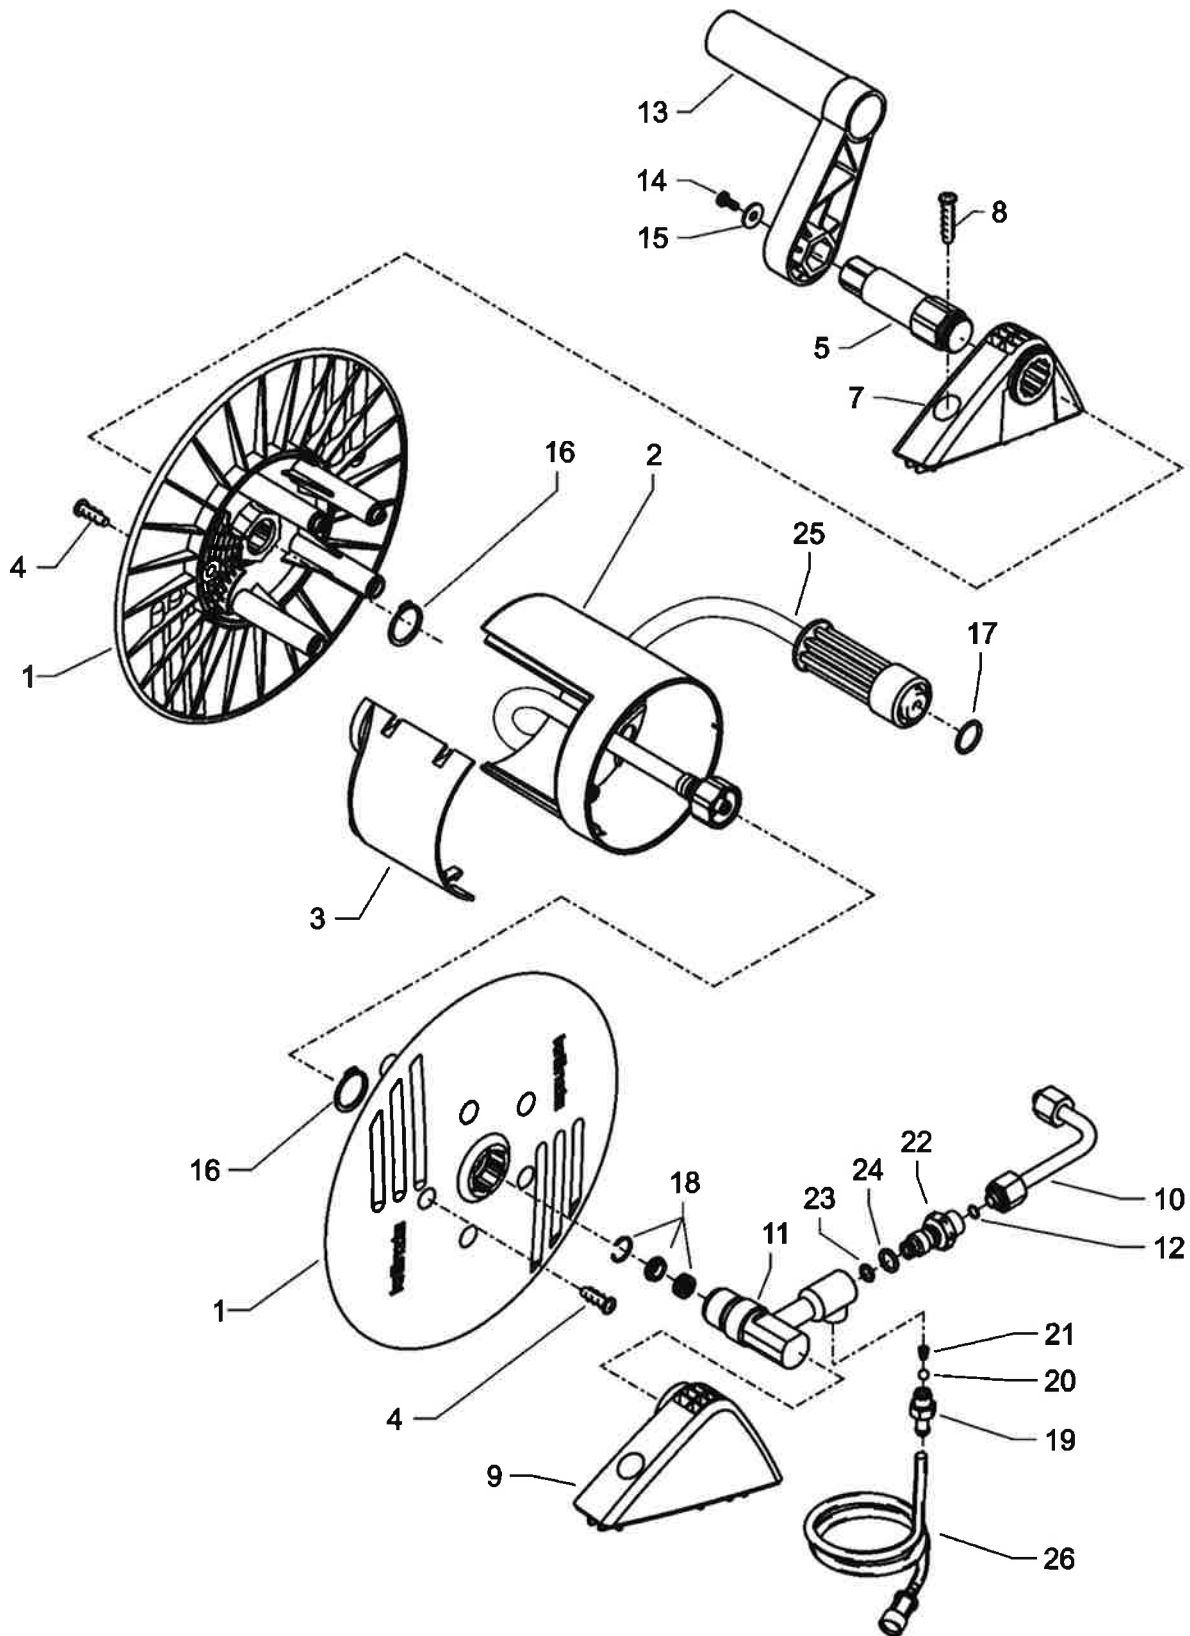

1 Seitenschale 2 48.101	1 side shell 2 48.101
2 Trommelteil 1 48.102	2 drum part 1 48.102
3 Knickschutz 1 40.162	3 kink protection 1 40.162
4 Kunststoffschraube 5,0 x 20 5 43.018	4 plastic screw 5.0 x 20 5 43.018
5 Antriebswelle 1 48.104	5 Drive shaft 1 48.104
7 Lagerklotz links 1 43.810	7 storage block left 1 43.810
8 Schraube 6,0 x 30 4 43.423	8 screw 6.0 x 30 4 43.423
9 Lagerklotz rechts 1 43.811	9 storage block right 1 43.811
10 Verbindungsrohr 1 49.014	10 connecting pipe 1 49.014
11 Wasser-Eingangsteil 1 48.103	11 Water inlet section 1 48.103
12 O-Ring 6 x 0,8 2 40.177	12 O-ring 6 x 0.8 2 40.177
13 Handkurbel 1 48.108	13 hand crank 1 48.108
14 Schraube M 5 x 14 1 40.536	14 screw M 5 x 14 1 40.536
15 Scheibe 5,3 1 50.152	15 disc 5.3 1 50.152
16 Wellensicherungsring 22 mm 2 40.117	16 shaft securing ring 22 mm 2 40.117
17 O-Ring 9,3 x 2,4 1 13.273	17 O-ring 9.3 x 2.4 1 13.273
18 Dichtsatz 1 13.410 1	18 Seal kit 1 13.410 1
19 Saugzapfen Schlauchanschluss 1 13.236	19 Suction plug Hose connection 1 13.236
20 Edelstahlkugel 5,5 mm 1 13.238	20 stainless steel ball 5.5 mm 1 13.238
21 Edelstahlfeder 1 13.239	21 stainless steel spring 1 13.239
22 Eingangsinjektor 1 40.317	22 input injector 1 40.317
23 O-Ring 10 x 2 1 43.068	23 O-ring 10 x 2 1 43.068
24 O-Ring 6,68 x 1,78 1 40.585	24 O-ring 6.68 x 1.78 1 40.585
25 Hochdruckschlauch 15m NW6 1 48.015	25 high pressure hose 15m NW6 1 48.015
26 Chemikaliensaugschlauch mit Filter 1 15.038	26 Chemical suction hose with filter 1 15.038
30 Schlauchtrommel kpl., ohne HD-Schlauch 48.100	30 hose drum complete, without HD hose 48.100


40 Ersatzteilliste

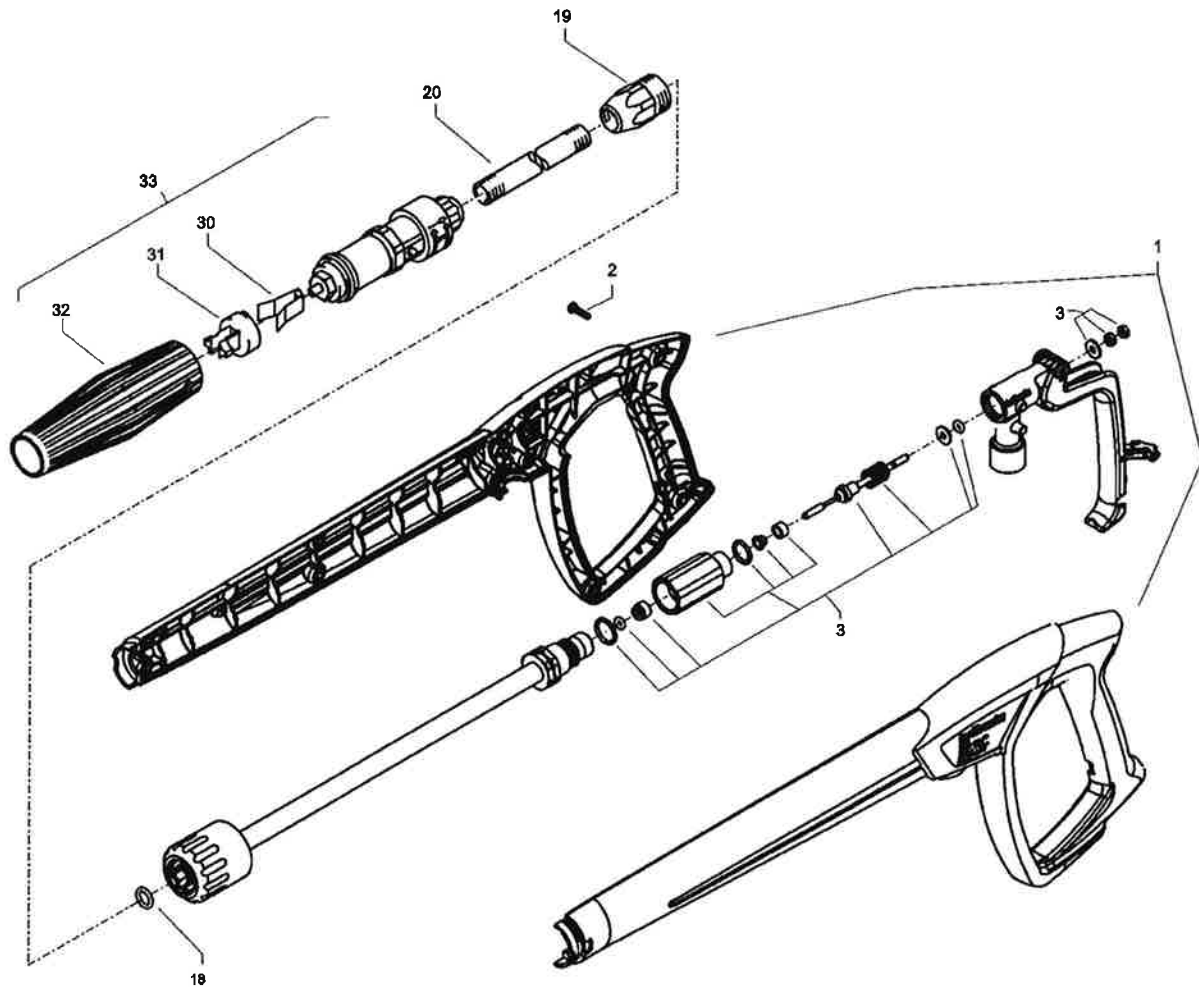

1 Pistolenschale rechts + links 1 12.450
2 Schraube 3,5 x 14 10 44.525
3 Reparatursatz M2000 12.454
18 O-Ring 9,3 x 2,4 1 13.273
19 ST 30-Nippel M 22 x 1,5 AG / M 12 x 1 1
13.363
20 Rohr 400 lang, bds. M12 x 1 1 15.002
30 Klemmstück 1 41.155 2
31 Halterung für Klemmstück 1 41.155 4
32 Kunststoffhülle 1 41.155 1
33 Vario-Jet 042 1 41.155 6
M2000-Pistole kpl. 12.480
Lanze kpl. mit Vario-Jet 042 41.156

1 pistol bowl right + left 1 12.450
2 screws 3.5 x 14 10 44.525
3 repair kit M2000 12.454
18 O-ring 9.3 x 2.4 1 13,273
19 ST 30 nipples M 22 x 1.5 AG / M 12 x 1 1
13.363
20 tubes 400 long, bds M12 x 1 1 15.002
30 clamping piece 1 41.155 2
31 Bracket for clamping piece 1 41.155 4
32 plastic sleeve 1 41.155 1
33 Vario-Jet 042 1 41.155 6
M2000 pistol complete 12480
Lance complete with Vario-Jet 042 41.156


Ersatzteilliste Kränzle 1122 TS T Schmutzkiller (Sonderzubehör)

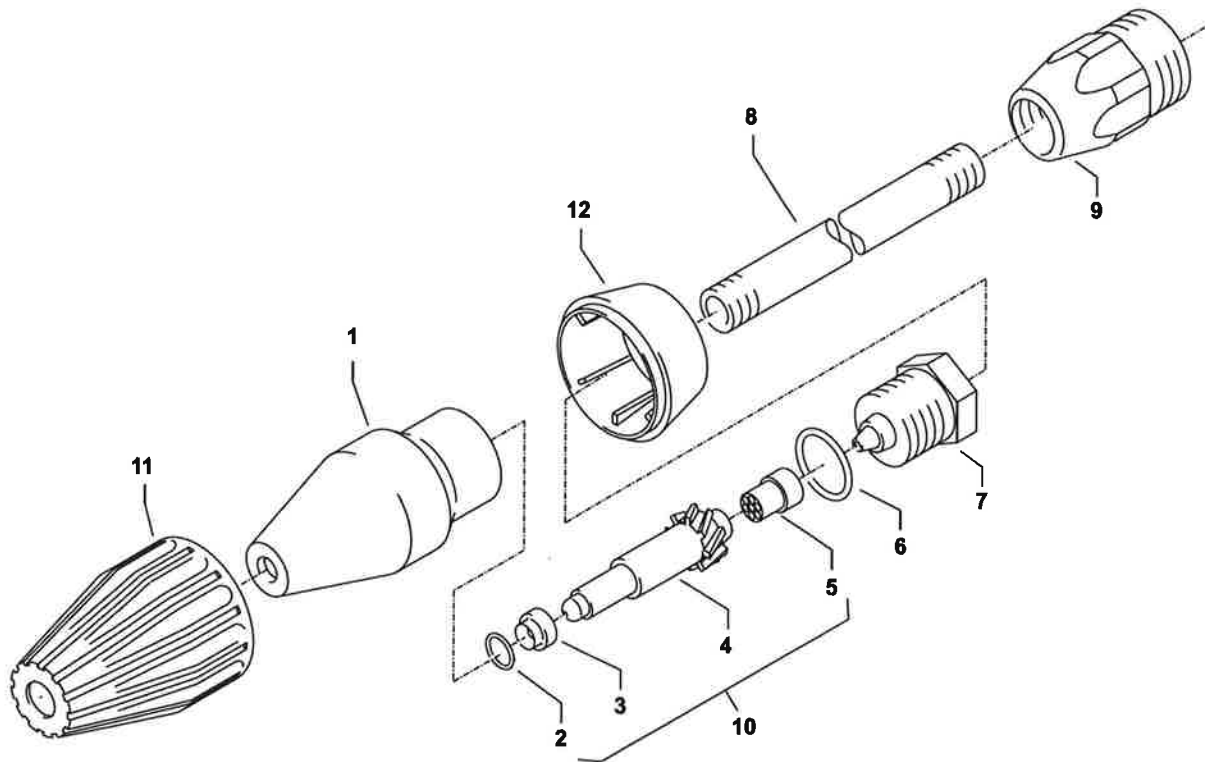

Position	Bezeichnung	Stck.	Art.-Nr.
1	Sprühkörper	1	41.520
2	O-Ring 6,88 x 1,68	1	41.521
3	Düsensitz	1	41.522
4	Düse 042	1	41.523-042
5	Stabilisator	1	41.524
6	O-Ring	1	40.016 1
7	Sprühstopfen	1	41.526
8	Rohr 400 mm 2x M 12 x 1	1	41.527
9	ST 30-Nippel M 22 x 1,5 / M 12 x 1 ISK	1	13.363
11	Kappe vorn für Schmutzkiller	1	41.528 1
12	Kappe hinten für Schmutzkiller 042	1	41.540 2
Rep.-Satz Schmutzkiller 042			41.096 5
bestehend aus je 1x 2; 3; 4; 5			
Schmutzkiller 042 kpl. mit Lanze			41.072 5

1 Sprühkörper 1 41.520	1 spray body 1 41,520
2 O-Ring 6,88 x 1,68 1 41.521	2 O-ring 6,88 x 1,68 1 41,521
3 Düsensitz 1 41.522	3 nozzle seat 1 41,522
4 Düse 042 1 41.523-042	4 nozzle 042 1 41.523-042
5 Stabilisator 1 41.524	5 stabilizer 1 41,524
6 O-Ring 1 40.016 1	6 O-ring 1 40.016 1
7 Sprühstopfen 1 41.526	7 spray plugs 1 41,526
8 Rohr 400 mm 2x M 12 x 1 1 41.527	8 pipe 400 mm 2x M 12 x 1 1 41,527
9 ST 30-Nippel M 22 x 1,5 / M 12 x 1 ISK 1 13.363	9 ST 30 nipples M 22 x 1.5 / M 12 x 1 ISK 1 13.363
11 Kappe vorn für Schmutzkiller 1 41.528 1	11 Front cap for dirt killer 1 41.528 1
12 Kappe hinten für Schmutzkiller 042 1 41.540 2	12 Rear cap for dirt killer 042 1 41.540 2
Rep.-Satz Schmutzkiller 042 41.096 5	Rep. Set of dirt killers 042 41.096 5
bestehend aus je 1x 2; 3; 4; 5	consisting of 1x 2 each; 3; 4; 5
Schmutzkiller 042 kpl. mit Lanze 41.072 5	Dirt killer 042 cpl. with lance 41.072 5

Schaltplan Kränzle 1122 TS T

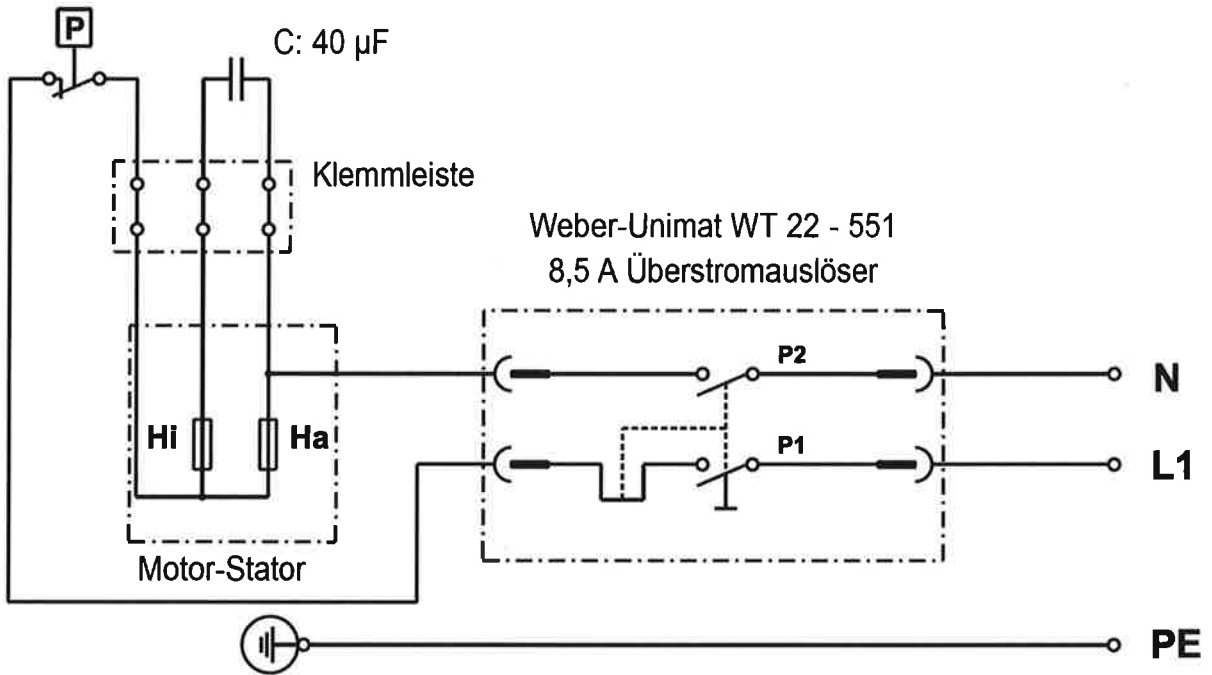

Inspection report for HP cleaners

HP cleaners for industrial use have to be checked by an expert every 12 months! Inspection report on annually carried out Labour Safety Inspection (UVV) according to the Guidelines for Liquid Spray Equipment. (This inspection sheet serves as proof for the completion of the retest and must be kept carefully!) Kränzle test seals: Order no. UVV200106

Owner: Type:.....

Address: Serial no.:

..... Rep. order no.:

Scope of inspection	o.k.	yes	no	repaired
Type plate (on hand)				
Operating manual (on hand)				
Protective covering, -device				
Pressure line (tightness)				
Pressure gauge (function)				
Float valve (tightness)				
Spraying device (marking)				
HP-hose / connector (damage, marking)				
Safety valve opens at 10 % / 20 % exceeding of operang pr.				
Power cable (damage)				
Protective conductor (connected)				
On / Off switch				
Used chemicals				
Allowed chemicals				

Inspection data	determined value	set value
High-pressure nozzle		
Operating pressure.....bar		
Switch off pressure.....bar		
Conductor resist. not exceeded / value		
Insulation		
Leakage current		
Trigger gun locked		

Inspection result (tick)

The appliance was checked by an expert according to the Guidelines for Liquid Spray Equipment, the defects found have been rectified so that the Labour Safety can be confirmed.

The appliance was checked by an expert according to the Guidelines for Liquid Spray Equipment. The Labour Safety cannot be confirmed unless the defects found are rectified by repair or replacement of the faulty parts

The next retest according to the Guidelines for Liquid Spray Equipment has to be carried out by: Month Year

Place, date Signature

Inspection report for HP cleaners

HP cleaners for industrial use have to be checked by an expert every 12 months! Inspection report on annually carried out Labour Safety Inspection (UVV) according to the Guidelines for Liquid Spray Equipment. (This inspection sheet serves as proof for the completion of the retest and must be kept carefully!) Kränzle test seals: Order no. UVV200106

Owner: Type:.....
 Address: Serial no.:
 Rep. order no.:

Scope of inspection	o.k.	yes	no	repaired
Type plate (on hand)				
Operating manual (on hand)				
Protective covering, -device				
Pressure line (tightness)				
Pressure gauge (function)				
Float valve (tightness)				
Spraying device (marking)				
HP-hose / connector (damage, marking)				
Safety valve opens at 10 % / 20 % exceeding of operang pr.				
Power cable (damage)				
Protective conductor (connected)				
On / Off switch				
Used chemicals				
Allowed chemicals				

Inspection data	determined value	set value
High-pressure nozzle		
Operating pressure.....bar		
Switch off pressure.....bar		
Conductor resist. not exceeded / value		
Insulation		
Leakage current		
Trigger gun locked		

Inspection result (tick)

The appliance was checked by an expert according to the Guidelines for Liquid Spray Equipment, the defects found have been rectified so that the Labour Safety can be confirmed.

The appliance was checked by an expert according to the Guidelines for Liquid Spray Equipment. The Labour Safety cannot be confirmed unless the defects found are rectified by repair or replacement of the faulty parts

The next retest according to the Guidelines for Liquid Spray Equipment has to be carried out by: Month Year

Place, date Signature